

Air ventilation and heating

Air ventilation

Ventilation throughout the apartment is controlled from the cooker hood controls. The ventilation system cannot be turned off completely, it always operates at least at minimum power.



There is a rotary switch on the cooker hood. **During the cooking, rotate it to “ON” position.** At other times, turn it to the “OFF” position. The level of the power is selected with buttons 1-4. **Especially when the sauna is on and about ½ hour after that, it is important to turn the cooker hood to the “OFF” position and the power to the position 2-4.** If there is a bad air, hot or many people in the apartment, you can enhance the ventilation by turning cooker hood switch to position 2-4. **At night and when absence, put the ventilation power to position 1.**

When using the fireplace, please turn fireplace switch ON on the wall in hall and place the ventilation power to position 1. Then the fireplace will draft better.

Especially when leaving, put the ventilation in position 1!



Heating

There is a radiator in each room of the apartment. **The radiator has been pre-set to a suitable temperature about 21-22 degrees.** If you adjust the radiator temperatures whilst staying, please restore the settings to starting position number 3, when you leave.



There is an underfloor heating in tiled floors. It is controlled from the control buttons in the hallway wall and in the bathroom wall. You can adjust the temperature suitable to the floor (normal position is 3). Never turn the underfloor heating off! If the floor is too cold or hot, adjust it from the control panel on the wall. It takes several hours before floor temperature is changed. **On departure leave the floor heating on and the position 3.**

