

DISHWASHER ELECTROLUX


Open the water connection from the kitchen tap (on/off switcher). Close the connection after program has finished.



Use

1. Open the water connection.
2. Turn the programme selector until the pointer is at the desired programme.
3. Press the Start button to start the programme.
4. When the programme is finished, the Auto Off function switches the appliance off.
5. **Close the water connection.**

Control panel

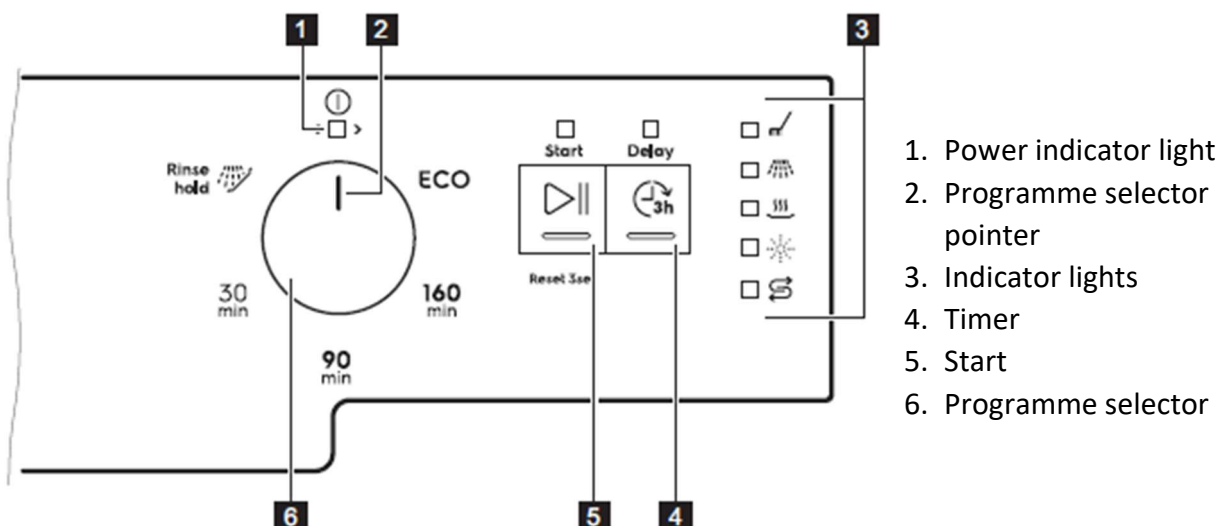

Indicator lights



Drying phase indicator light. Lights up when you select a programme with a drying phase. Flashes when the drying phase is running.



Salt indicator light. Please note that the water in the area is soft and there is no need for salt.



Anti-crease indicator light. Lights up when the rinse aid compartment needs to be filled. It's always off when the programme is running.



Washing phase indicator light. Lights up when the washing phase is running.



Rinse phase indicator light. Lights up during the rinsing phase.

Programmes

ECO is suitable for normally soiled dishes and is the most efficient program in terms of energy and water consumption for this type of dish

160min for normally soiled pots, plates, glasses and lightly soiled pans

90min for normally soiled dishes that need a quicker wash

30min for lightly soiled dishes

Rinse for dishes you plan to wash later in the day