

## DISHWASHER UPO


Open the water connection from the kitchen tap (on/off switcher). Close the connection after program has finished.



### Use

1. Open the water connection.
2. Press the power button to switch on the device.
3. Select the program with the "P" button, the program indicator lights up
4. Select additional functions (half load or other function).
5. Press the Start/Pause button. The program will start.
6. When the washing program is finished, press the power button to switch the power off the device.
7. **Close the water connection.**

## Control panel

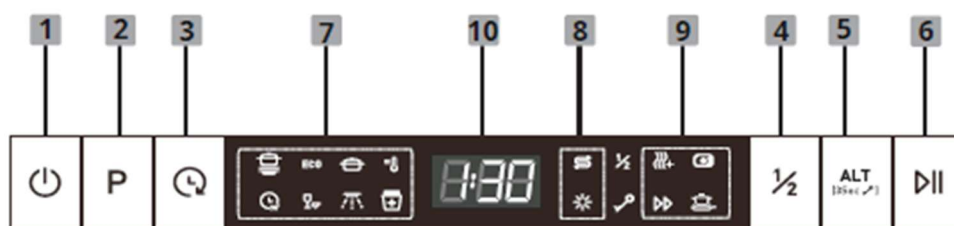

### Action (button)

1. POWER: Press the button to switch on the device, the display lights up
2. PROGRAM: Press the button to select the washing programme, the program indicator lights up
3. Delay: Press the button to delay the start of the washing program. You can delay the start for up to 24 hours. Pressing this button once will delay the start by one hour.
4. HALF LOAD: When you have half or less laundry of the maximum load of the device, you can select this function to save energy and water. (Can only be used with Intensive, EVO, Universal, Hygiene and 90min programs.)
5. ADDITIONAL FUNCTION: Press the button to select additional functions, the function indicator lights up. This button also allows you to child-lock the control panel buttons except the power button. Press the button for 3 seconds simultaneously to lock or unlock.
6. START/PAUSE: Press the button to start or pause the washing program.

### Display

7. Program indicator
  - Intensive** for heavily soiled dishes and normally soiled pots, pans, dishes. (180 minutes)
  - ECO** is the standard program and it's suitable for normally soiled dishes and is the most efficient program in terms of energy and water consumption for this type of dish. (230 minutes)
  - Universal** for normally soiled pots, plates, glasses and lightly soiled pans. (155 minutes)
  - Hygiene** for disinfecting dishes and glassware. Keeps water temperature at 72°C. (200 minutes)
  - 90 min** for normally soiled dishes that need a quicker wash. (90 minutes)
  - Quick** for lightly soiled dishes that don't need drying. (30 minutes)
  - Rinse** for dishes you plan to wash later in the day. (15 minutes)
  - Machine care** for effective cleaning the dishwasher itself. (130 minutes)
8. Warning indicator
  - Rinse aid is low
  - Salt is low (**NOTE! The Ruka area has soft water and salt is not needed.**)
9. Additional function indicator (these functions can be used only with Intensive, ECO, Universal, Hygiene and 90 min)
  - Extra dry** for better drying results.
  - 3 in 1** for using multi-purpose detergent for normally soiled dishes.
  - Speed** for reducing the program duration.
  - Power Wash** for heavily soiled dishes that are difficult to clean.
10. Display
  - To display delay time, error coded etc.