

DISHWASHER ROSENLEW

Open the water connection from the kitchen tap (on/off switcher). Close the connection after program has finished.



Meaning of indicator lights




Wash light turns on when the machine is washing or rinsing.

Dry light turns on when the machine is drying.

End of program light turns on when program ends.

The program phase indicator lights start flashing as soon as you select the program.

Control panel

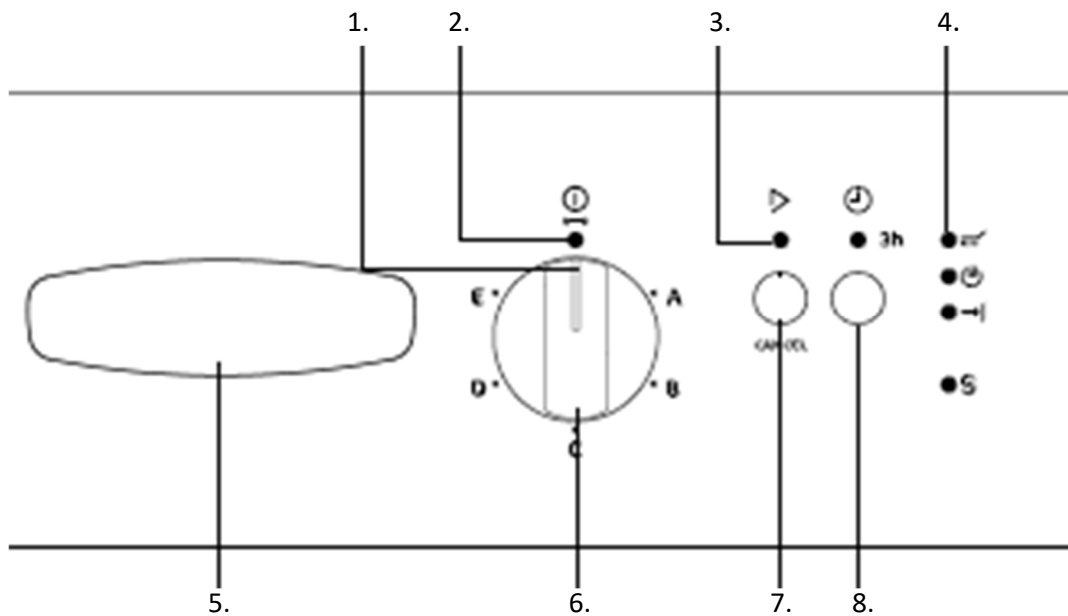

1. Program selector mark
2. Power indicator light
3. Start indicator light
4. The program phase indicator lights
5. Door handle
6. Program selector
7. Start button
8. Timer button

Washing programs

Program		Program selection	Duration (minutes)
Intensive	For very dirty dishes	A	115-130
Normal	For normally dirty dishes	B	105-115
Quick	When you wash the dishes right after dining	C	25-25
Eco	For normally dirty dishes	D	118-128
Pre-wash	For rinsing the dishes	E	12

Use

1. Open the water connection.
2. Turn the program selector to the selected program. The power light turns on.
3. Press the Start button. The program starts automatically.
4. When the program is finished, turn the program selector back to the Off position to turn the power off.
5. **Close the water connection.**