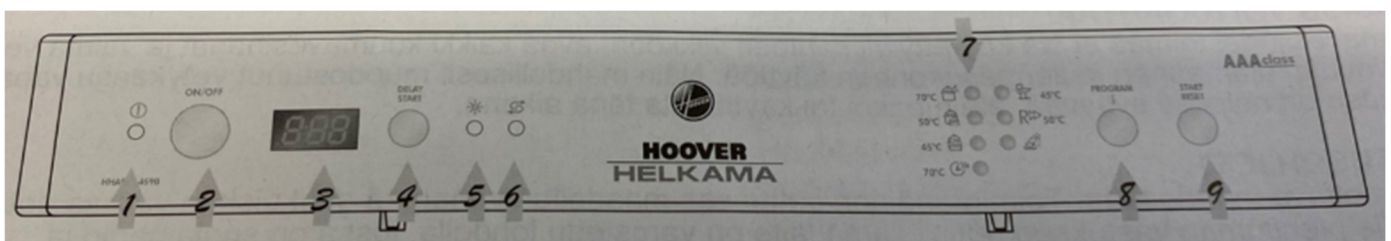 


DISHWASHER HOOVER HELKAMA

Open the water connection from kitchen tap (on/off switcher). Close the connection after the program has finished.

 


 
 
 
 


Control panel



1. Power light
2. Power switch
3. Display
4. Delay button
5. Rinse aid indicator light
6. Salt level indicator light
7. Program indicator light
8. Program button
9. Start button

Programs

 TEHOPESU	Power wash: for very dirty dishes
 YLEISPESU (EN 50242)	General wash: for normally dirty dishes
 ECO	Eco wash: for slightly dirty dishes
 1 TUNTI	1 hour: daily wash
 LASIPESU	Glass wash: for slightly dirty dishes
 PIKAPESU	Quick wash
 ESIPESU	Prewash

Use

1. Open the water connection.
2. Add detergent and close the machine door.
3. Turn on the machine at the power switch.
4. Select the appropriate washing program.
5. Start the program by the start button.

When the program is finished, turn off the machine at the power switch. **Close the water connection.**