


# HOB HOOVER HELKAMA

## Hob controls

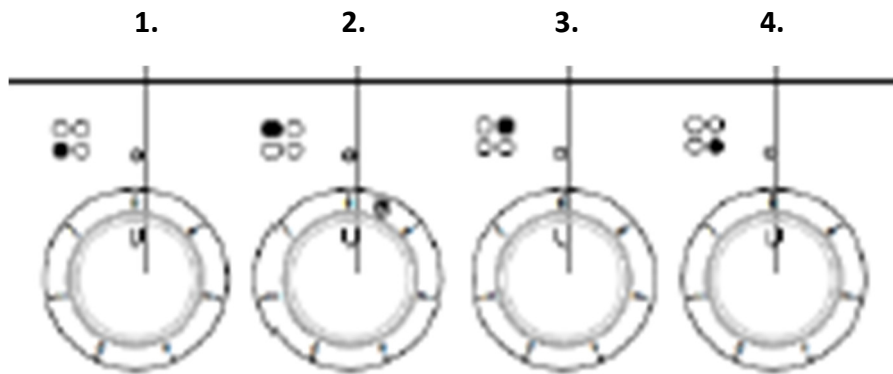

1. Left front heater
2. Left back heater
3. Right back heater
4. Right front heater

## Use of the hob


1. Place the cookware on the hob and turn its. The function light turns on to indicate that the hob is in use.
2. 1 = Keeps food warm. 2-3 = Heat at low temperature. 4-5-6 = Cook, fry, boil.
3. When you have finished cooking make sure that the hob controls are turned to 0-position.

## Safety instructions

- Keep children away from the stove.
- Never use the hobs empty.
- Do not store anything on the stove.



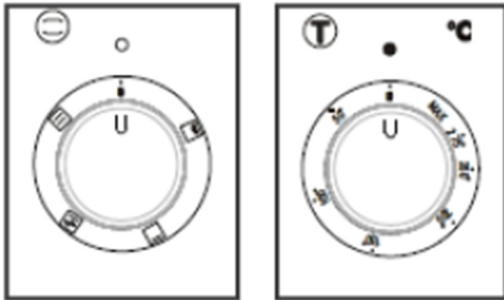

# OVEN HOOVER HELKAMA

## Oven controls



Oven function knob    Oven thermostat control knob

## Oven functions

-  Top + bottom heat + fan
-  Grill
-  Top heat
-  Bottom heat

## Use of the oven

1. Select the oven function and then set the oven temperature.
2. When the temperature of the oven reaches the set value, the thermostat light goes out.
3. After cooking, set both controls to 0-position.

## Safety instructions

- Do not open the oven door unnecessarily during cooking.
- Do not place anything on the oven door when it's open.