


HOB AND OVEN

CONTROL PANEL

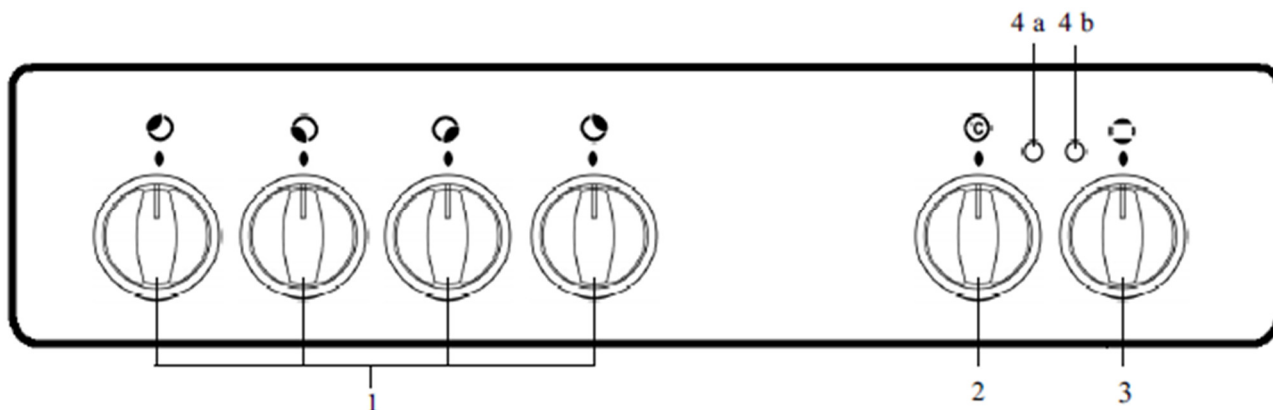

1. Knobs for cooking zones
2. Oven temperature selector
3. Oven function selector
- 4a. Oven indicator light
- 4b. Hob indicator light

There are four cooking zones. Each cooking zone has its own warning light. The power of the cooking zone is controlled by a knob marked 0-12. Position 12 means maximum power. The knobs can be turned clockwise and counterclockwise.

Using the hob

1. Turn the knob of the desired cooking zone to the desired power.
2. Reset the knob after use.

Oven functions

Oven light

Oven light comes on automatically each time you select functions. If you wish, you can only switch on the light without any other functions being switched on.

Upper/lower heat

Upper and lower resistors are on

Upper heat

Upper resistor is on

Lower heat

Lower resistor is on

Grill

Grill-upper resistor is on

Rapid heating

Grill and lower resistor on. Oven heats up to 200 °C in about 7 minutes.

Stew

Stew, up to 125 °C.