



WASHING MACHINE

Open the water connection for the washing machine (on/off switch on the wall).
Close the connection after program has finished.

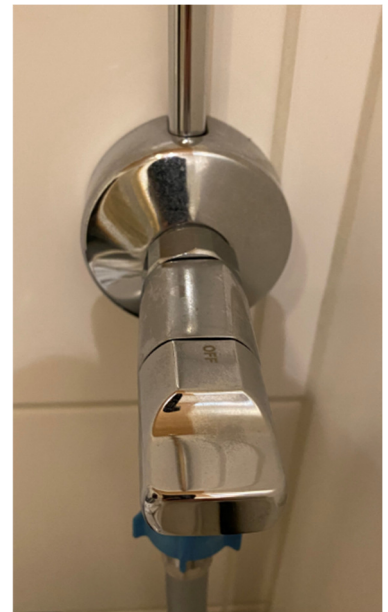

CONTROL PANEL

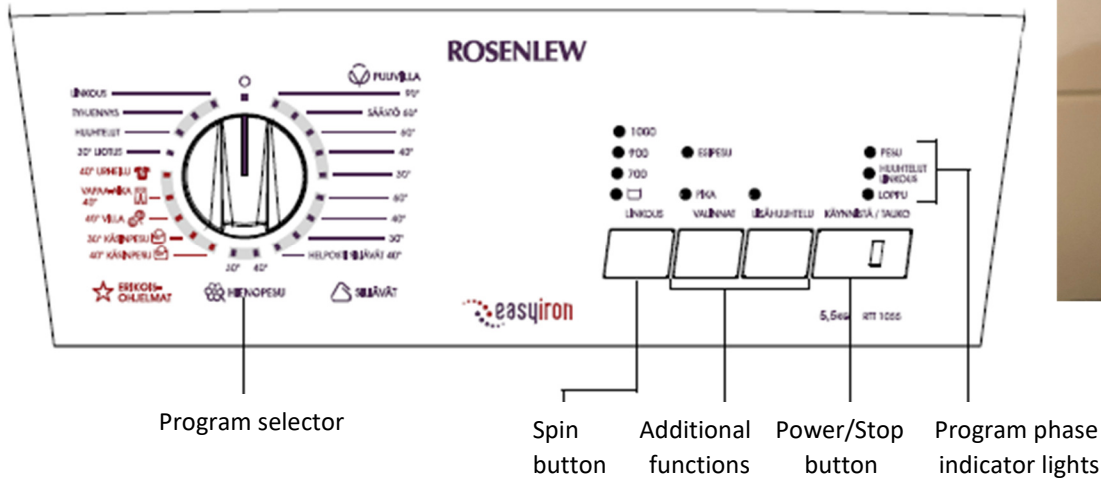

Program selector In position O, the machine is switched off. In other positions, the machine is turned on and the program is selected.

Spin button Select the desired spin speed or the option "stop water on the machine" or "quiet night wash" by pressing the button several times in succession.

Additional functions Select one or more advanced functions by pressing the button repeatedly.

Power/Stop button Starts or stops the washing program.

Program phase indicator lights Indicates the phase of the washing program in progress.

USE

1. Open the water connection.
2. Turn the program selector to the desired program.
3. If you want to spin the laundry a spin speed other than the speed suggested by the machine, press the spin button to change the speed. You can also select "Ei linkousta" (No spin), "Lopetus vesi koneessa" (End water on the machine) or "Hiljainen yöpesu" (Quiet night wash).
4. If necessary, press the additional function buttons to select desired additional functions.
5. Press the Start/Pause button to start the program.
6. At the end of the program, the "End" (Loppu) indicator light comes on. The lid cannot be opened until about two minutes after washing machine has stopped.
7. Turn the program selector to position O.
8. Close the water connection.

ADDITIONAL FUNCTIONS

Prewash The washing machine performs a prewash with a maximum temperature of 30 °C. The prewash ends with a short spin with the cotton and synthetic programs and the emptying of the machine with a rinse wash program.

Quick wash Time is reduced according to the selected program.

Additional rinsing The washing machine performs one or more extra rinses during the washing program. The function is recommended for sensitive skin.

PROGRAM TABLE

Program	Description	Load (kg)	Additional functions
Bomull	White or color, e.g. normally dirty clothes, work clothes, bed sheets, tablecloth underwear, towels	5,5	Quick, Prewash, Additional rinse, End water on the machine
Eco	White or color, e.g. normally dirty work clothes, bed sheets, tablecloth, underwear, towels	5,5	Quick, Additional rinse, End water on the machine
Synthetic	Synthetic fabrics, e.g. underwear, shirts, jackets	2,5	Quick, Prewash, Additional rinse, End water on the machine
Delicate	All delicate fabrics	2,5	Quick, Prewash, Additional rinse, End water on the machine
Synthetic	Less wrinkled laundry	1	Prewash, Additional rinse, End water on the machine
Hand wash	Very delicate fabrics with "Hand wash" mark	1	End water on the machine
Wool	Wool with "Machine washable" mark	1	End water on the machine
Jeans	Denim fabrics. Additional rinse.	3	Additional rinse, End water on the machine
Sport	Very dirty outdoor clothes. Prewash.	2,5	Additional rinse, End water on the machine
Soak	Soaking very dirty laundry	5,5	
Rinse	Handwashed laundry can be rinsed with this program	5,5	End water on the machine
Drain	Drain the machine when the program has ended with water in the machine (or after a quiet night wash).	5,5	
Spin	Spinning 700-1000 rpm when the program is run out of water in the machine	5,5	