


DISHWASHER

Notice! Before starting the dishwasher, make sure that the dishwasher’s water tap is open (on/off switcher). Please close the water tap after completion of the programme.



Control panel

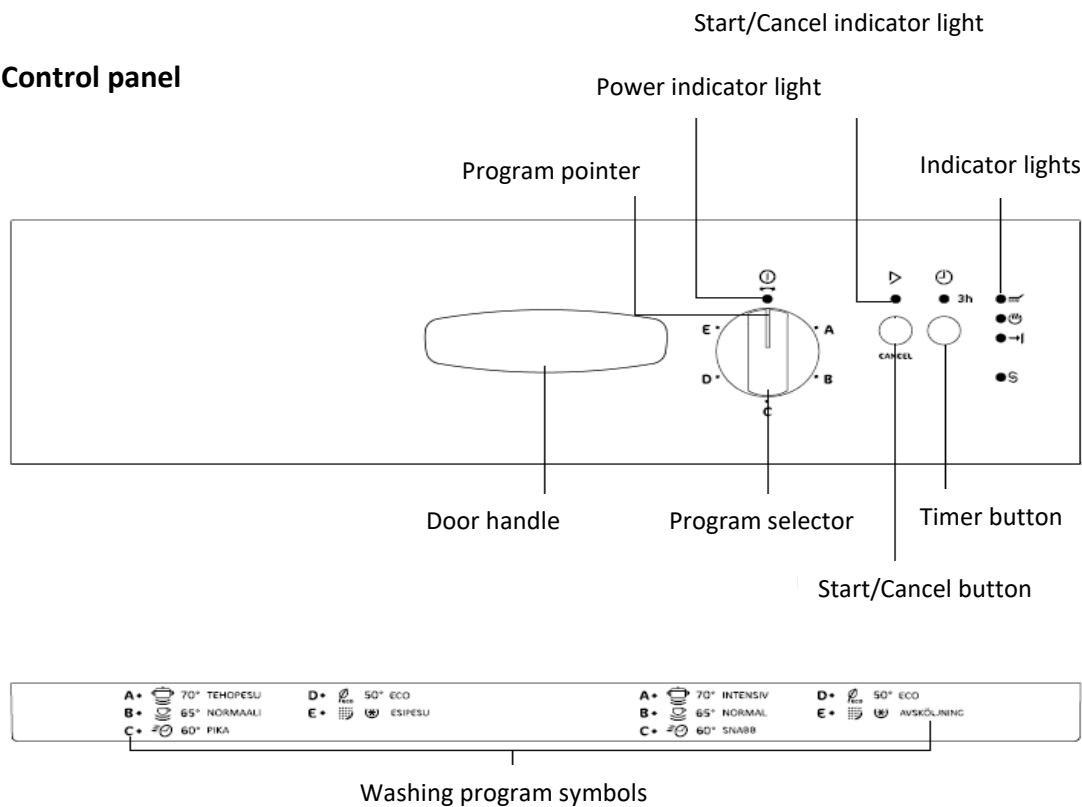

Indicator lights

	Wash: lights up during the washing and rinsing phases
	Drying: lights up during the drying phase
	End of program: lights up at the end of the washing program

The indicators for the program phase of the selected program start flashing as soon as you select the wahing program. When the program starts, the program phase indicators go out except the current phase indicator lights, which remains on solidly.

Timer button

This option allows the program to start three hours later.

Start/Cancel button

When washing program is set, press this button to start the program. The Start/Cancel indicator light comes on. This button can also be used to cancel the current washing program.

Use

1. Open the water tap.
2. Select washing program by turning the program selector until desired program number is at the program pointer. The power light turns on. The indicators for the selected program phase start flashing.
3. Press the Start/Cancel button. The program starts automatically and the Start/Cancel indicator lights up.
4. At the end of the washing program the machine stops automatically.
5. Turn the program selector back to Off position to turn off the device.
6. Close the water tap.
7. Open the door and allow the dishes to cool slightly and dry before placing them in the cupboard.

Washing programs

Program	Program	Duration (minutes)
Intensive wash	A	115-130
Normal wash	B	105-115
Quick wash	C	25-35
Eco	D	118-128
Pre-wash	E	12