

Air ventilation and heating

Air ventilation

Ventilation throughout the apartment is controlled from the cooker hood controls. The ventilation system cannot be turned off completely, it always operates at least at minimum power. There is a rotary switch on the cooker hood.

During the cooking, rotate it to “ON” position. At other times, turn it to the “OFF” position. The level of the power is selected with buttons 1-4. Especially when the sauna is on and about ½ hour after that, it is important to **turn the cooker hood to the “OFF” position and the power to the position 2-4.** If there is a bad air, hot or many people in the apartment, you can enhance the ventilation by turning cooker hood switch to position 2-4. **At night and when absence, put the ventilation power to position 1.**



When using the fireplace, please turn fireplace switch ON on the wall in hall and place the ventilation power to position 1. Then the fireplace will draft better.



Heating

There is the Optiwatti automation system installed in the property. The Optiwatti controls heating for each room. The temperature of the apartment is set in advance.

On departure please leave the cooker hood to OFF position and air ventilation to position 1.