


COMBI MICRO OVEN ELECTROLUX

PRODUCT DESCRIPTION

General overview

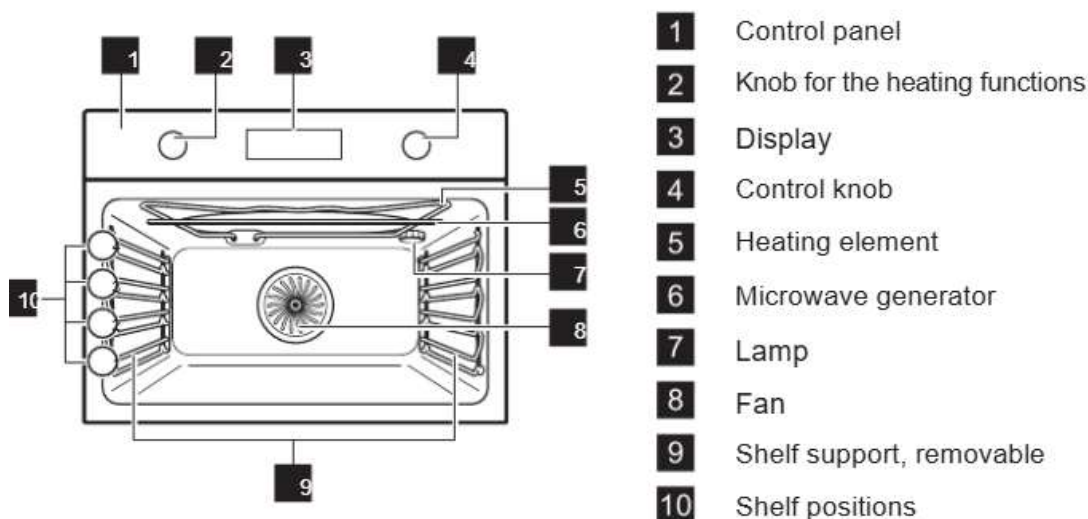

Control panel overview and

	Press to set: Clock functions.
	Press to set: Fast Heat Up.
	Press to turn on or to turn off the oven lamp.
WATT	Press to set: Microwave power.
OK	Press to confirm your selection.
	The appliance is locked.
	Enter the menu and select the icon to open: Assisted Cooking.
	Enter the menu and select the icon to open: Settings
	Microwave function is turned on.
	Minute minder is turned on.
	End time is turned on.
	Time Delay is turned on.
	Optimer is turned on.
	For temperature or time. The bar is fully red when the appliance reaches the set temperature.



FUNCTIONS

Standard heating functions



True Fan Cooking

To bake on up to two shelf positions at the same time and to dry food. Set the temperature 20 - 40 °C lower than for Conventional Cooking.



Conventional Cooking

To bake and roast food on one shelf position.



Pizza Function

To bake pizza. To make intensive browning and a crispy bottom.



Turbo Grilling

To roast large meat joints or poultry with bones on one shelf position. To make gratins and to brown.



Menu

To enter the Menu: Assisted Cooking, Settings.

Microwave combi functions



Turbo Grilling + MW

To roast large pieces of meat on one level. To make gratins and to brown. The function with MW boost.



True Fan Cooking + MW

Baking on one shelf position. The function with MW boost.

Microwave functions



Defrost

Defrosting meat, fish, cakes, power range: 100 - 200 W



Reheat


Heating up pre-prepared meals and delicate food, power range: 300 - 700 W






Microwave


Heating up, cooking, power range: 100 - 1000 W

ADDITIONAL FUNCTIONS

-  Lock: This function prevents an accidental change of the appliance function.
Turn it on when the appliance works – the set cooking continues, the control panel is locked.
Turn it on when the appliance is off – it cannot be turned on, the control panel is locked.

 OK - press and hold to turn on the function. A signal sounds and  flashes 3 times when the lock is turned on.  OK - press and hold on to turn off the function.

USING THE HEATING FUNCTIONS

1. Turn the knob for the heating functions to select a heating function.
2. Turn the control knob to set the temperature.
3. Press OK.
4. Press and hold to turn on the function: Fast Heat Up. It is available for some oven functions. 

USING THE MICROWAVE FUNCTIONS

1. Remove all accessories from the oven except the baking rack.
2. Turn the knob for the heating functions to select the microwave function.
The display shows the duration and microwave power.
3. Press OK to start with the default settings
OR turn the control knob to adjust the duration and press OK
OR press WATT and turn the control knob to adjust the microwave power and press OK.
You can also adjust the settings during cooking.

USING THE MICROWAVE COMBINATION FUNCTIONS

The microwave combination functions combine standard oven functions with Boost microwave functions to reduce cooking time and improve cooking results.

1. Remove all accessories from the oven except the baking rack.
2. Select the microwave combination function by turning the oven function knob.
The display shows the temperature and microwave power.
3. Press OK to start the oven with the default settings
OR to adjust the temperature, turn the knob and press OK
OR to adjust the microwave power, press WATT and turn the knob and press OK.
You can also adjust the settings during cooking.