 


DISHWASHER ELECTROLUX

Open the water connection from the kitchen tap (on/off switcher) before starting the dishwasher. Close the connection after program has finished.




CONTROL PANEL

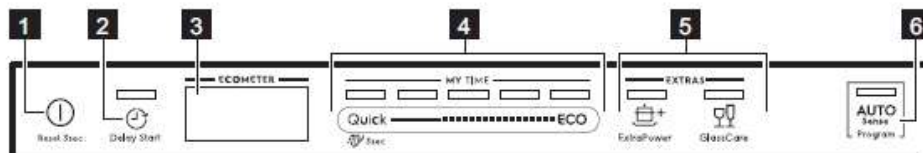

- | | |
|--------------------------------|----------------------------|
| 1 On/Off button | 5 EXTRAS buttons |
| 2 Delay Start button | 6 AUTO Sense button |
| 3 Display | |
| 4 MY TIME selection bar | |

DISPLAY AND ECOMETER

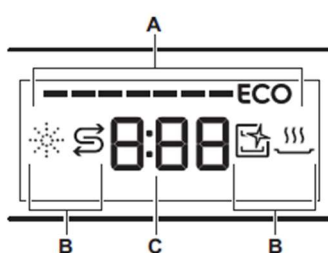





- A. ECOMETER
B. Indicators
C. Time indicator



The ECOMETER indicates how the programme selection impacts energy and water consumption. The more bars are on, the lower the consumption is.

ECO indicates the most environmentally friendly programme selection for a normally soiled load.

INDICATOR LIGHTS

Indicator	Description
	Rinse aid indicator. It is on when the rinse aid dispenser needs refilling. Refer to "Before first use" .
	Salt indicator. It is on when the salt container needs refilling. Refer to "Before first use" .
	Machine Care indicator. It is on when the appliance needs internal cleaning with the Machine Care programme. Refer to "Care and cleaning" .
	Drying phase indicator. It is on when a programme with the drying phase is selected. It flashes when the drying phase operates. Refer to "Programme selection" .


DAILY USE

1. Open the water connection.
2. Press the On-Off button until the machine switches on.
3. Press the button of the desired program. The indicator light on the button lights up.
4. If desired, turn on additional functions.
5. Close the device door to start the program.
6. **The door of the device opens automatically during the drying phase and remains open.** (Excluding the Pre-rinse program.)
7. When the program is finished, the Auto Off turns off the device automatically.
8. Close the water connection.

USING MY TIME SELECTION

With **MY TIME** selection button, you can select a suitable washing program based on the duration of the program.

1. Slide your finger across MY TIME selection bar to choose a suitable program. The light related to the selected program is on. The ECOMETER indicates the level of energy and water consumption. The display shows the program duration.
2. Activate applicable EXTRAS if desired.
3. Close the appliance door to start the program.

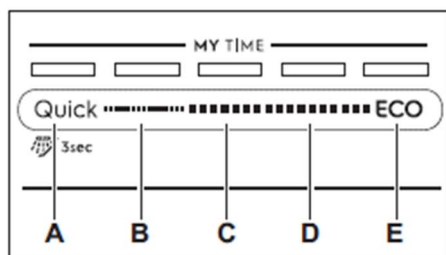

PROGRAMS

- A -30min shortest program for washing fresh or minor dirt off dishes
-Pre-rinse 15min (press the button A for 3 seconds to select) to rinse dishes. Don't use detergent with this program.
- B 1h is a program suitable for washing a load with fresh and lightly dried-on soil.
- C 1h 30 min is a program suitable for washing and drying normally soiled dishes.
- D 2h 40 min is a program suitable for washing and drying soiled dishes.
- E ECO is the longest (4h) program for washing normally soiled dishes with the most efficient energy and water consumption.

AUTO Sence program automatically adjusts the washing program according to the type of dishes. The device recognizes how dirty the dishes are and the amount of the dishes in the dishwasher. This program automatically adjusts the temperature, water consumption and duration of the program.

Machine Care is a program intended for optimal cleaning of the inside of the device. It removes limescale and grease.

EXTRAS

ExtraPower improves the result of the selected washing program by increasing the water temperature and extending the duration of the washing program.

GlassCare provides special care for a delicate load. The option prevents rapid changes in the wash temperature of the selected program and reduces it to 45°C. This protects glassware in particular from damaging.