

## DRYING CABINET

The cabinet is equipped with two control knobs for adjusting power and operating time.

The control knob on the left adjusts the temperature and the control knob on the right adjusts the operating time. The scale of the temperature controller is 0-70 °C (**recommended temperature is 40-50 °C**) and the maximum operating time is 4 hours. The operation of the cabinet starts and stops when the timer is switched on and off.

Clothes must be hung so that air can circulate in the dryer. Clothes must be placed evenly in the dryer. Do not dry clothes at too high temperature.

**NOTE! The drying cabinet has a overheating protection. If this is tripped, both the fan motor and the heating element will cut out. To restart the dryer, turn the timer control to position 0 and after about 5 minutes turn it back to desired drying time.**