


DISHWASHER

Notice! Before starting the dishwasher, make sure that the dishwasher's water tap is open (on/off switcher). Please close the water tap after completion of the programme.



Control panel

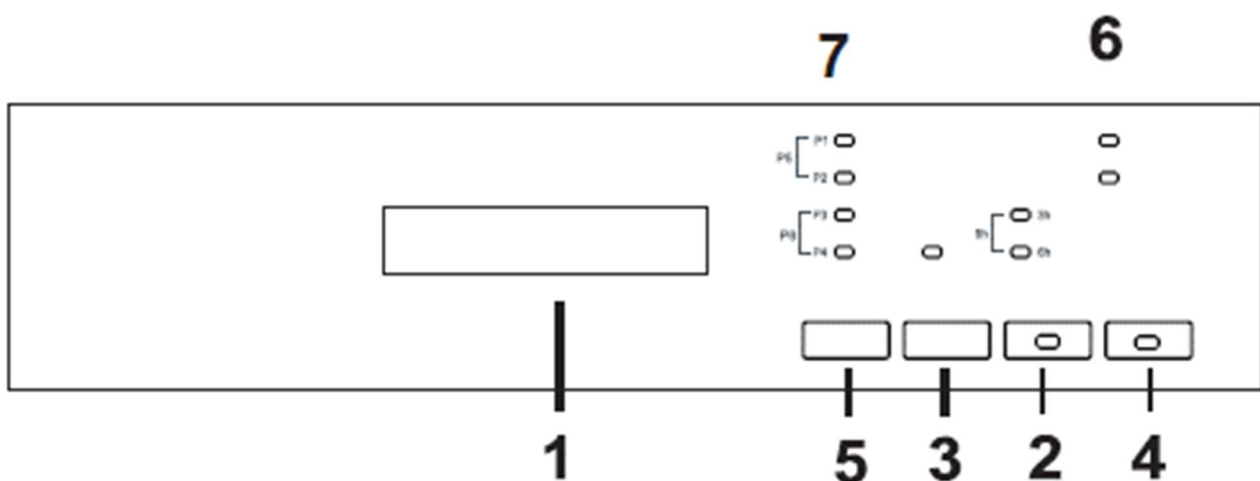

1. Lid handle
2. Timer / ½ filling
3. Start / Pause
4. Power ON-OFF
5. Program selector
6. Power and Rinse aid indicator lights
7. Display / Program phase

Use

1. Open the water tap.
2. Switch on the machine by pressing the ON-OFF button.
3. Select the appropriate program by repeatedly pressing the Program selector button.
4. Press the Start/Pause button to start the program.
5. When the washing program ends, the machine stops automatically and “Valmis” (ready) will light up. Switch off the machine by pressing the ON-OFF button.
6. Close the water tap.
7. Open the lid and let the dishes cool and dry a little before putting them in the cabinet.

Programs

Program	Program	Duration (minutes)
Quick 40°C	P1	30
Eco	P2	198
Super	P3	50
Efficient 65°C	P4	114