


DISHWASHER

Notice! Before starting the dishwasher, make sure that the dishwasher's water tap is open (on/off switcher). Please close the water tap after completion of the programme.



Control panel

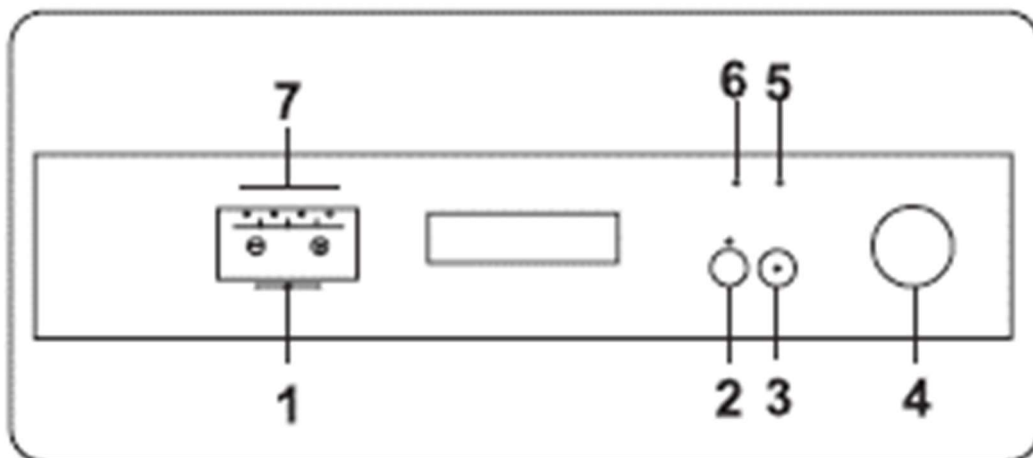

1. Timer
2. Half full
3. Start / Pause
4. Power / Program selector
5. Rinse aid indicator light
6. Power indicator light
7. Program phase (washing, rinsing, drying, end)

Use

1. Open the water tap.
2. Switch on the machine and select the appropriate program by turning the program selector.
4. Press the Start/Pause button to start the program.
5. When the washing program ends, the machine stops automatically and “Loppu” (end) will light up. Switch off the machine by turning the program selector to OFF position.
6. Close the water tap.
7. Open the lid and let the dishes cool and dry a little before putting them in the cabinet.

Programs

Program	Program	Duration (minutes)
Eco	P1	205
Super	P2	50
Efficient 65°C	P3	117