


WASHINE MACHINE

Open the water connection for the washing machine (on/off switch on the wall). Close the connection after program has finished.



CONTROL PANEL

- | | |
|------------------|---------------------|
| 1. Night program | 5. Timer |
| 2. Power wash | 6. Extra rinsing |
| 3. Quick wash | 7. Program display |
| 4. Start/Pause | 8. Program selector |

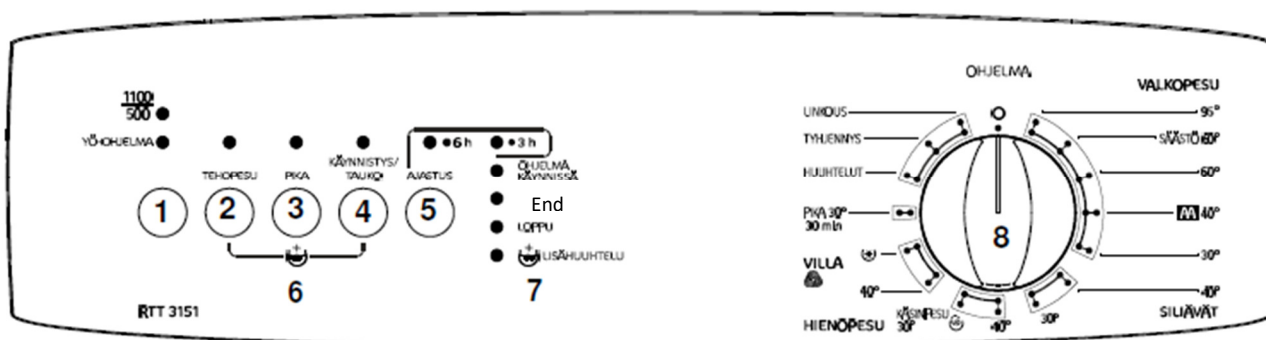

USE

1. Open the water tap.
2. Select washing program by turning the program selector to the desired program.
3. If necessary, select desired additional functions by pressing the additional function buttons.
4. Press the Start/Pause button to start the washing program.
5. The washing program ends automatically. The lid can be opened when the lock is released. The "End" LED will light up.
6. Turn the program selector to position O.
7. Close the water tap.

PROGRAM TABLE

Program	Load kg	Additional functions	Temperature °C	Duration
White or color wash White or colored, work clothes, bedding, tableclothes, underwear, towels	5	All	95, 60, 40	140-170
Synthetic Synthetic clothing, underwear, colored, shirts, blouses	2,5	All	40	75-85
Delicates Fine laundry, e.g. curtains	2,5	All	40	65-75
Hand wash Gentle laundry program, washing mark "Hand wash"	1	1100/500/Night program + Timer	30	45-55
Wool Machine washable wool	1		40	50-60
Quick Lightly dirty clothing, except wool	2,5		30	35
Rinsing For rinsing hand-washed laundry	*	3 rinses with rinse aid. Spinning.		30-40
*Depending on the quality of the laundry				

ADDITIONAL FUNCTIONS

1100/500/Night program button Press the button to select from the following functions:

1100/500: Spin speed is reduced to 500 rpm in white or color wash programs and synthetic and delicate wash programs.

Night program: The sound level of the functions of the selected washing program decreases. The spin phase is omitted, there are 3 additional rinses in the program and the last rinse water is left in the machine to prevent wrinkling. To end the washing program, turn the program selector to Spin (Linkous) and press Start/Pause button.

Power wash button Prewash temperature max 30°C. In white or color wash and synthetic, the prewash ends with a short spin. In the delicate wash program the prewash program ends with emptying.

Quick button The duration of a program decreases depending on the selected program.

Timer button You can schedule the program to start later. Press the button to select number of hours after which you want the program to start.

Extra rinse button The washing machine is designed to consume as little water as possible, however, people with allergies may use more water for rinsing with this Extra rinse option.