


HOB AND OVEN

Control panel

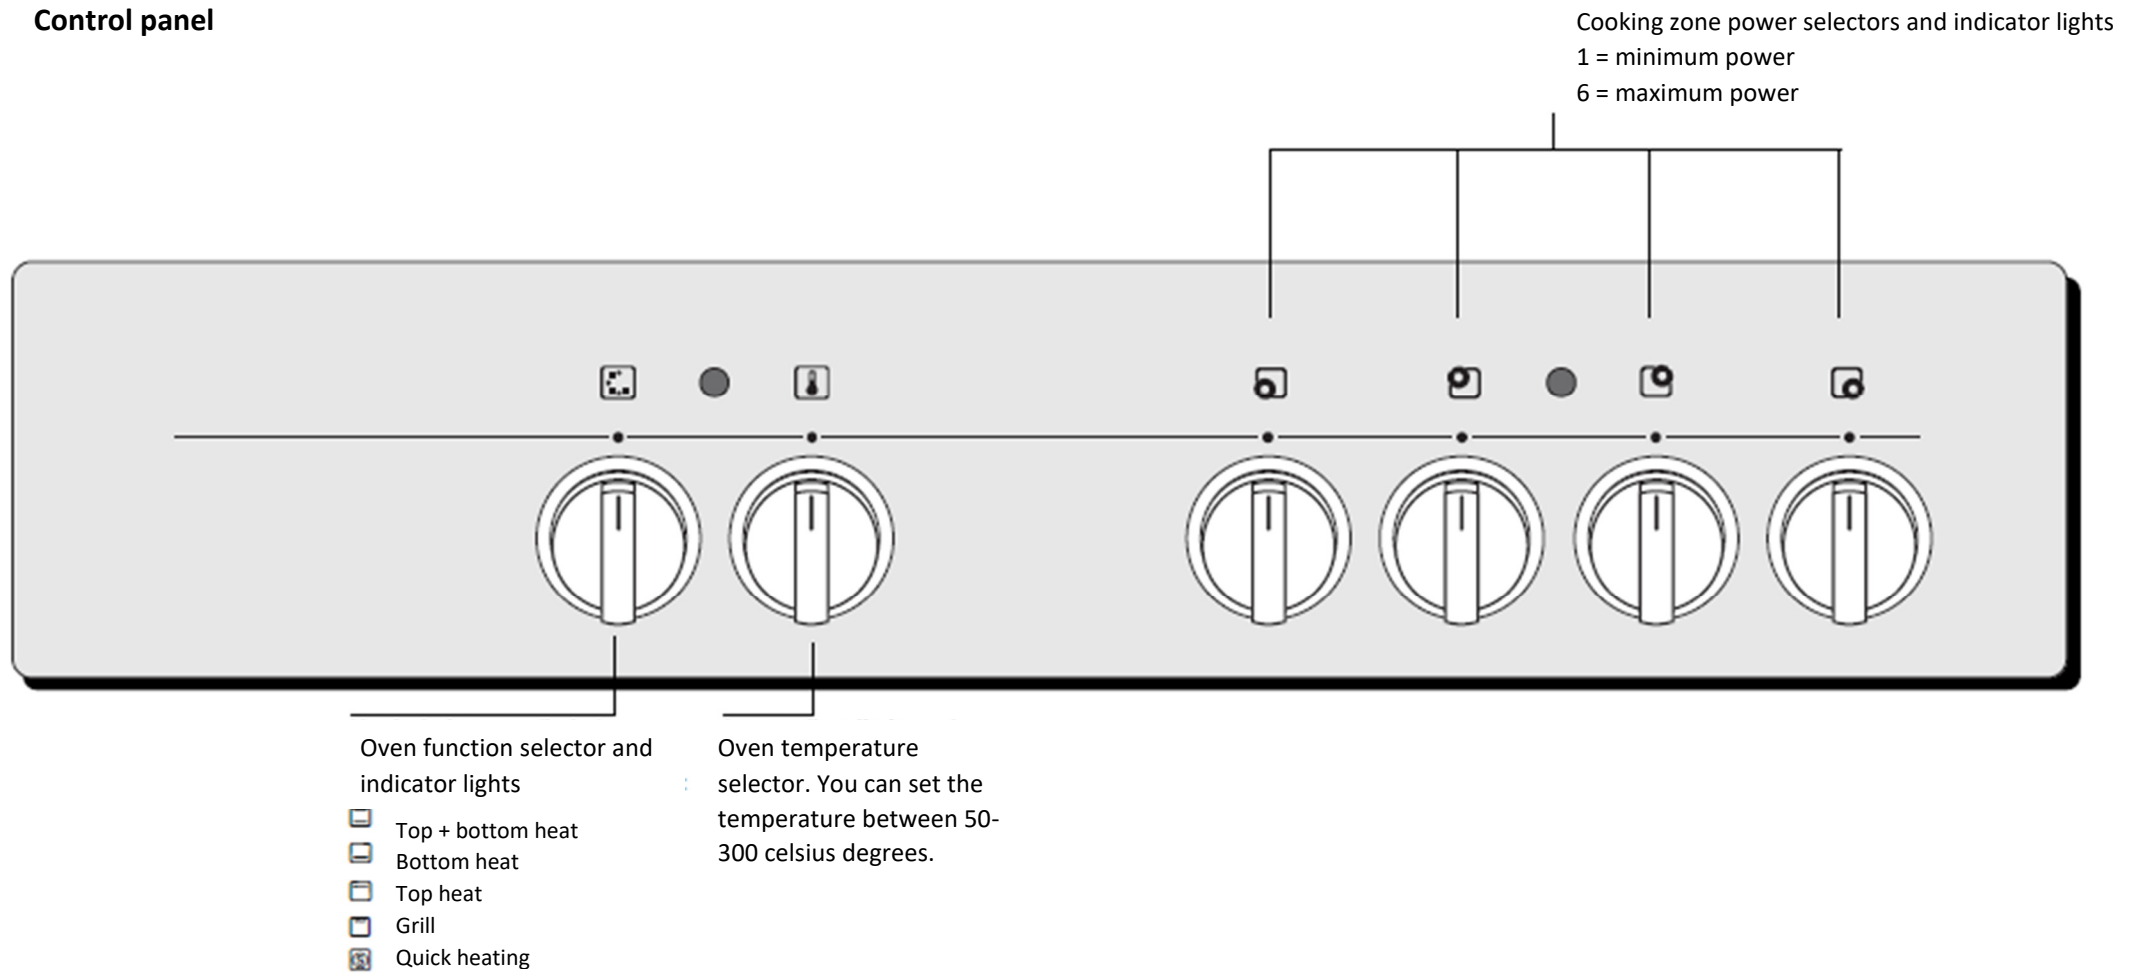

When the function is selected, the indicator light above the function selector lights up and oven light will turn on. Set the function selector to position 0 when you are not using the oven.

When the temperature is selected, the indicator light above the selector lights up. The light goes out when the temperature reaches the set value.