 


# TV

 
## Overview of the remote

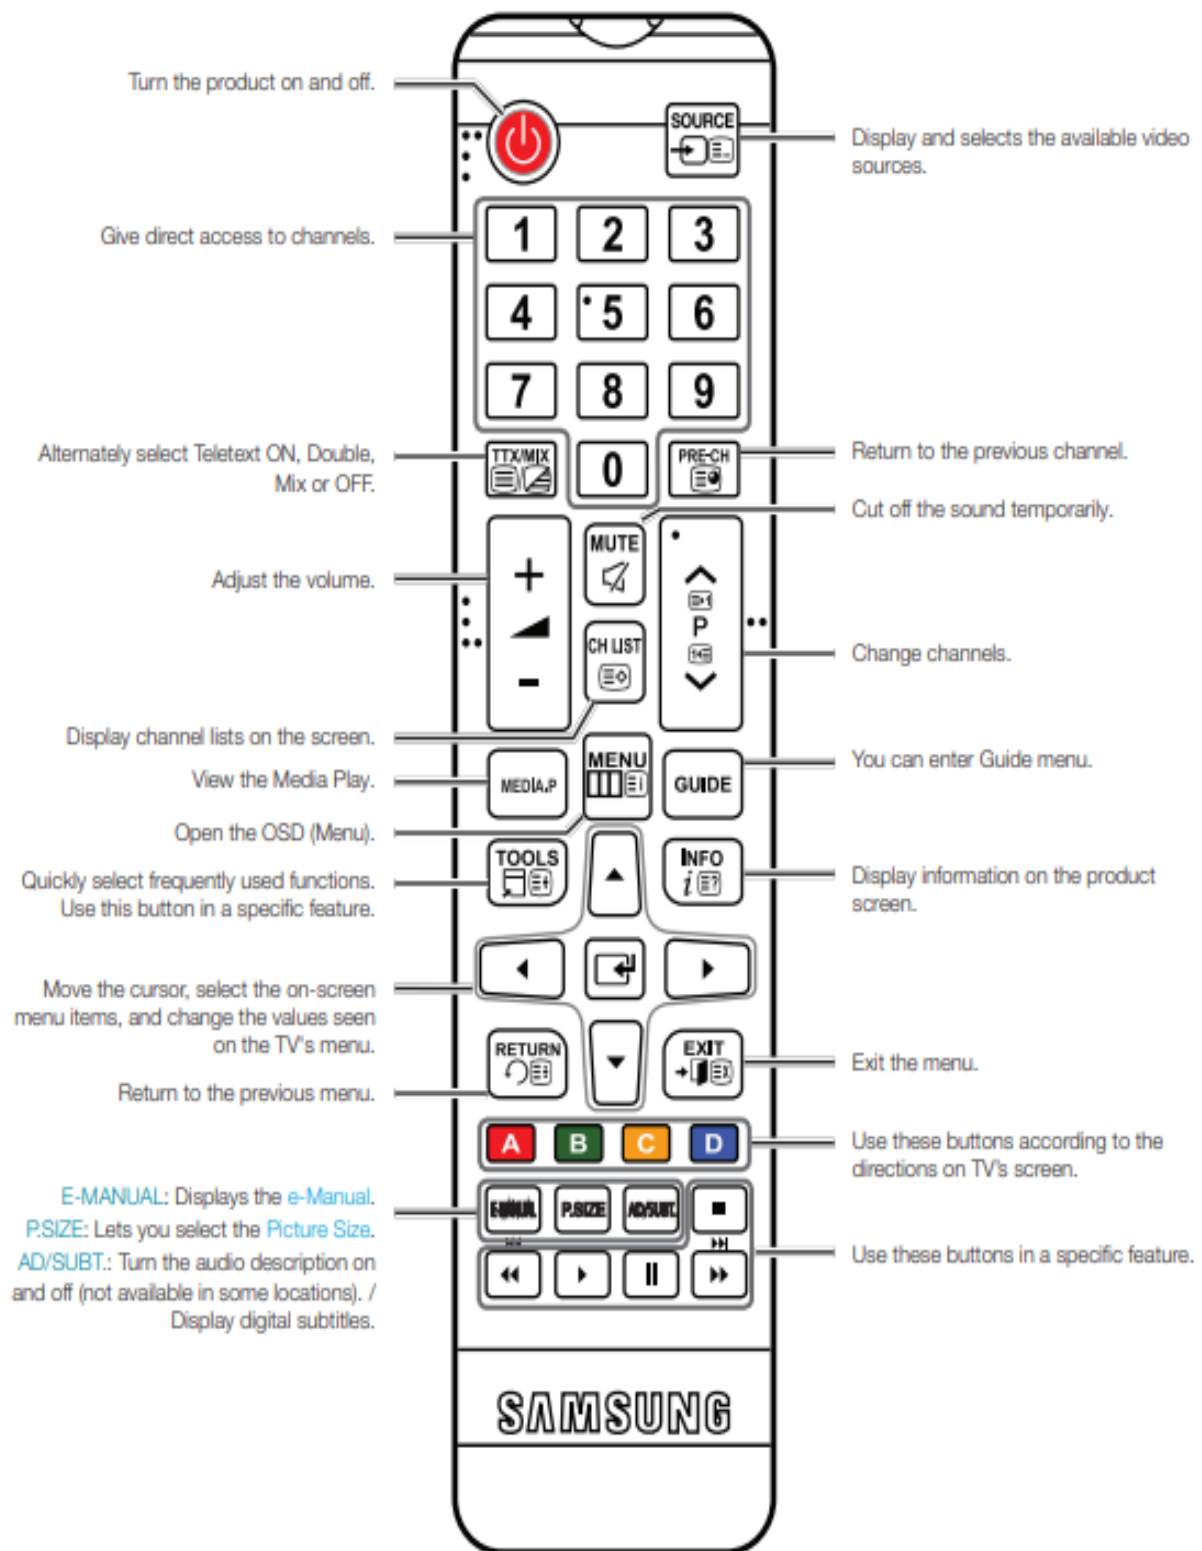

## Using the TV's Controller (Panel Key)

The TV's Controller, a small joy stick like button on the rear left side of the TV, lets you control the TV without the remote control.

- Some functions which require a PIN code may not be available.
- The product colour and shape may vary depending on the model.
- Exits the menu when pressing the controller more than 1 second.
- When using the controller in the up/down/left/right directions, make sure you do not push the controller in first. If you push the controller in first it will not move in the up/down/left right directions.

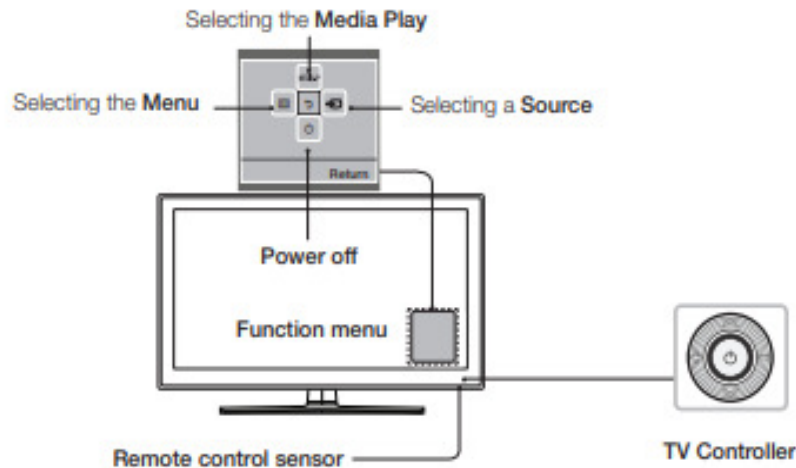

## Language selection

MENU → System → Menu Language → ENTER

Set the menu language.

 
## Changing the Input Source

### TV / Ext. / HDMI1 / HDMI2/DVI / AV / Component

Use to select TV or other external input sources such as DVD / Blu-ray players / cable box / STB satellite receiver connected to the TV.

- Press the SOURCE button. In the displayed Source list, connected inputs will be highlighted.
- PC(D-Sub) input is not supported. If you want to connect PC to the TV, you can connect the HDMI to DVI cable with the **HDMI IN 2 (DVI)** port on the TV.

## Connections / Connecting optional equipment

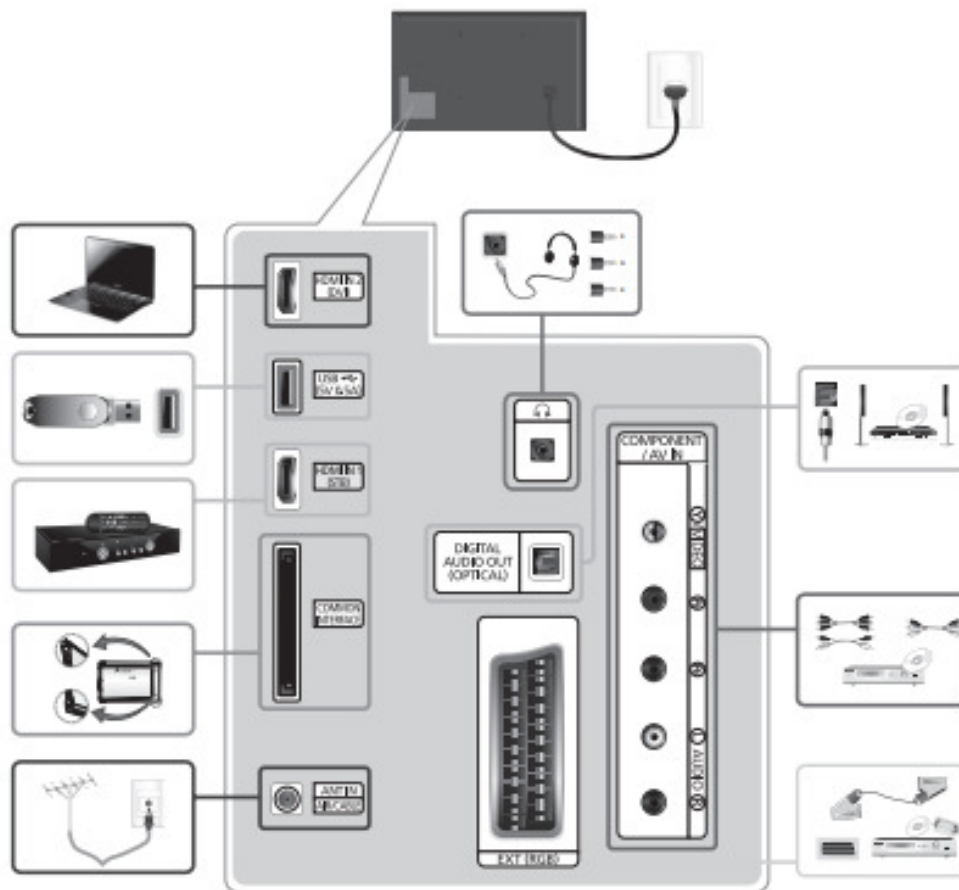

### NOTE

- Connecting through the HDMI cable may not be supported depending on the PC.
- If a DVI to HDMI cable is connected to **HDMI IN 2 (DVI)** port, there will be no audio.
- For set-top box connection using HDMI cable, we highly recommend you to connect the **HDMI IN 1 (STB)** port.
- The headphone jack supports only the 3 conductor tip-ring-sleeve (TRS) type.