


COOKER HOOD AND AIR VENTILATION

Ventilation throughout the apartment is controlled from the cooker hood controls.

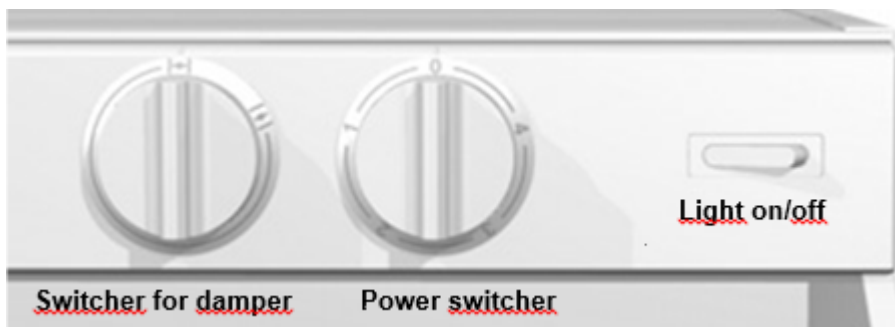

There are two rotary switchers on the cooker. The button on the right is for the light of the cooker hood.

Switcher for damper

- Turn to right only when cooking
- Keep it as turned to left when you are NOT cooking (or want air ventilation to be more efficient in other rooms)

Power switcher

0 = off position (don't use)

1 = absence position

2 = normal position

3 = power position

4 = maximum power position

Notice

- Power switcher must be kept always at least position 1
- At night and when absence, put the ventilation power to position 1
- Switcher for damper turned to left when NOT cooking
- When the sauna is on and 30 min after the sauna stove has been switched off, it is important to turn the damper switcher to the left and the power switcher to the position 3-4.
- If there is a bad air, hot or many people in the apartment, you can enhance the ventilation by turning power switcher to position 3-4.
- The powered fireplace ventilator is working only when power switcher in position 1-4.