

ELECTRIC MIXER

1. Insert the beaters into the mixer. It may be necessary to turn the beaters slightly while doing this (fig.1)
2. Put the plug in the wall socket.
3. Put the ingredients in a bowl.
4. Lower the beaters in to the ingredients and switch the mixer on (fig.2) Press the turbo button to mix, more quickly or to increase the speed during heavy jobs.
5. If you want to stop mixing for a while, switch the appliance off and put it (with the beaters still attached) on its heel until you continue. (fig.3)
6. When you have finished mixing, set the control slide to 0 and unplug the appliance.
7. Press the control slide to the eject position to release the beaters or kneading hooks. (fig.4).

