


## MICROWAVE OVEN

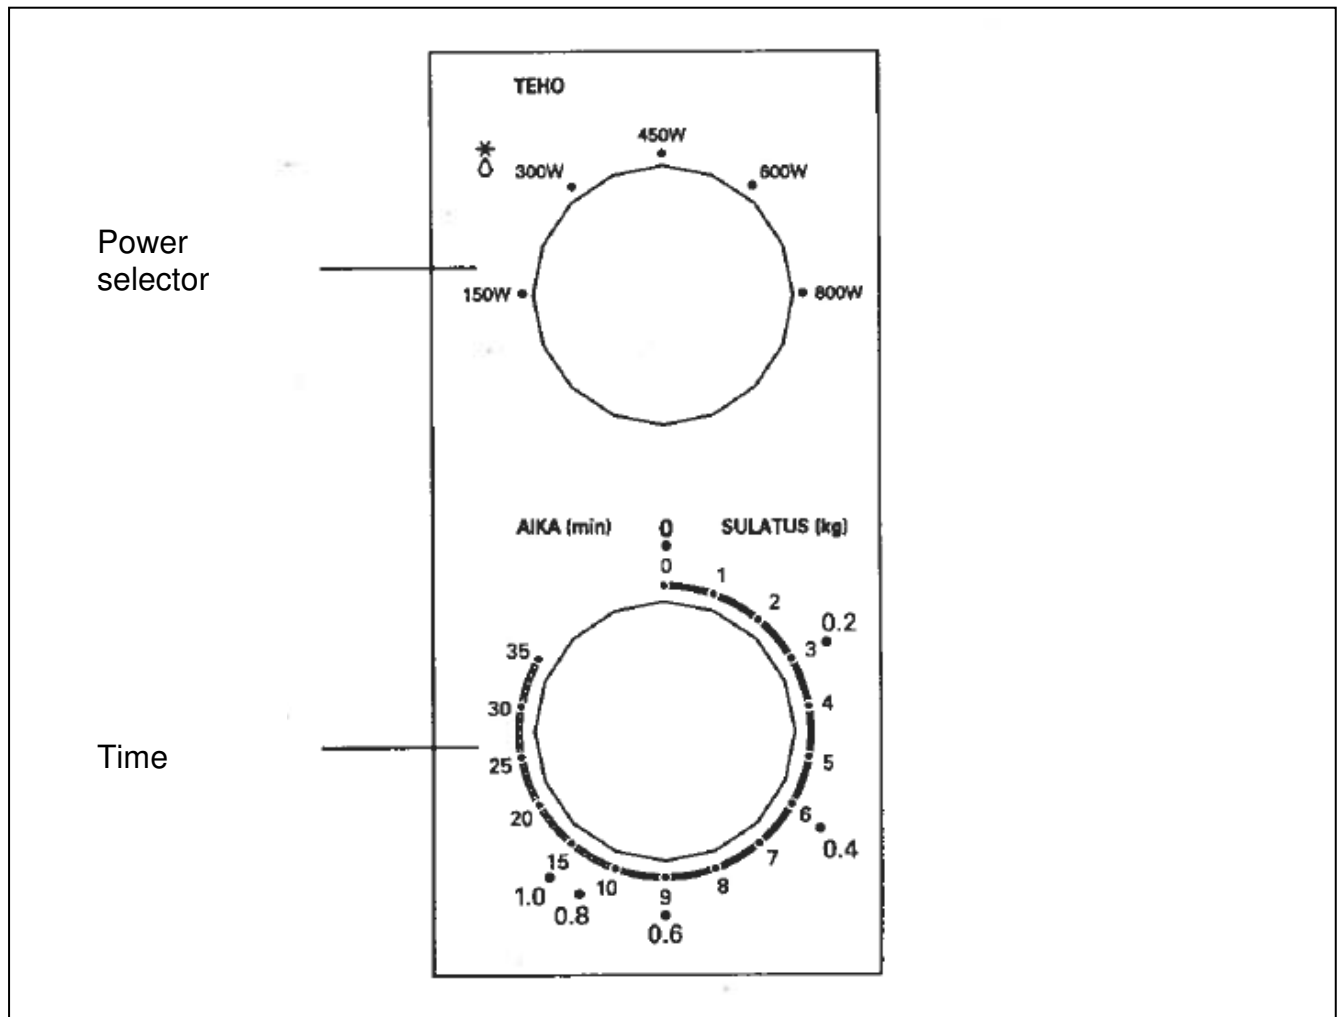

1. Select the power by turning the selector to the desired position.
2. Select the cooking time by turning the selector to the desired position.
3. The microwave starts automatically when power and time are set.
4. When the cooking time reached, you can hear sound "kling" and it stop.