

## AIR VENTILATION AND HEATING

### Air ventilation

Ventilation throughout the apartment is controlled from the cooker hood controls. The ventilation system cannot be turned off completely, it always operates at least at minimum power. **Especially when you are cooking or having sauna (and also ½ hour after that) it is important to turn the cooker hood power to the MAX (4) position.** If there is a bad air, hot or many people in the apartment, you can enhance the ventilation by turning cooker hood power to position 2-4. **At night and when absence, put the ventilation power to position 1.** The button on left side is for the cooker hood lights.



### Heating

There is a radiator in each room of the apartment. **The radiator has been pre-set to a suitable temperature about 21-22 degrees.** If you adjust the radiator temperatures whilst staying, please restore the settings to starting position number 3, when you leave.



There is an underfloor heating in tiled floors. It is controlled from the control buttons in the hallway wall and in the bathroom wall. You can adjust the temperature suitable to the floor (normal position is 3). Never turn the underfloor heating off! If the floor is too cold or hot, adjust it from the control panel on the wall. It takes several hours before floor temperature is changed. **On departure leave the floor heating on and the position 3.**

