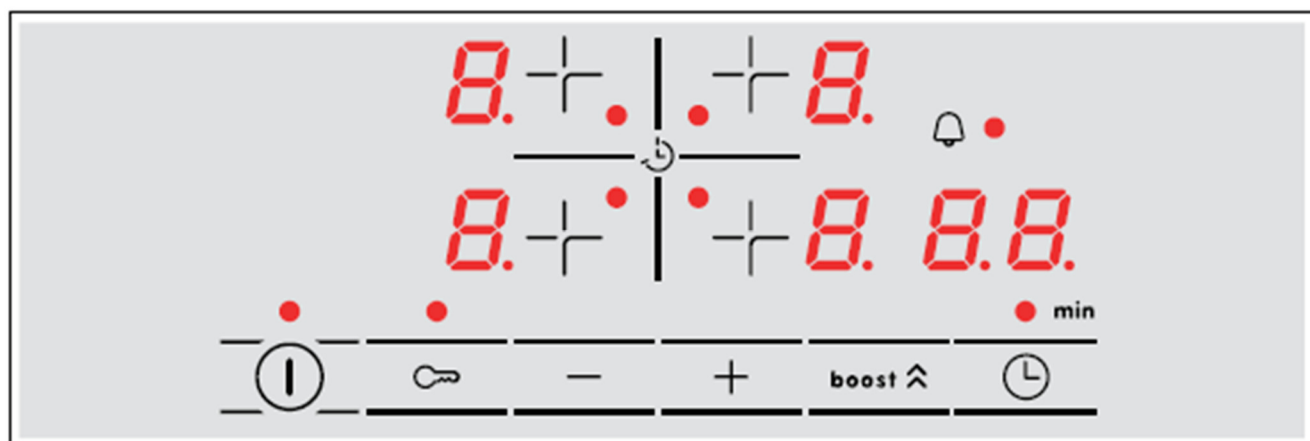 


HOB BOSCH

Control panel



Controls

| | |
|---------|----------------------|
| I | Main switch |
| + | Selecting a hotplate |
| -/+ | Adjustment fields |
| boost ^ | PowerBoost function |
| ⌚ | Timer function |
| 🔑 | Childproof lock |

Indicators

| | |
|-----|---------------------|
| 0 | Operating status |
| 1-9 | Heat settings |
| H/h | Residual heat |
| b | PowerBoost function |
| 00 | Timer |

Touch controls

Touching a symbol activates the associated function.

Notes

- Always keep the control panel clean and dry. Moisture reduces its effectiveness.
- Do not place any cookware near the indicators or sensors. The electronics could overheat.

Use

1. Touch the main switch to switch the hob on. An audible signal sounds.
2. Select the hotplate.
3. Touch the + or – symbol until the required heat setting appears.
4. You can readjust the heat setting by selecting the hotplate again and then touch + or – symbol until the required heat setting appears.
5. To switch off the hotplate, first select the hotplate and then touch the + or – symbol until 0 is displayed. The hotplate switches off and the residual heat display (H or h) is displayed.
6. If you want to switch off all the hotplates and hob at once, touch the main switch symbol until the display goes out. All hotplates and hob are switched off. The residual heat display stays on until the hotplates have cooled down sufficiently.

PowerBoost function

The PowerBoost function enables you to heat up large quantities of water faster than when using heat setting 9. The function can be used by any hotplate provided that no other hotplates are switched on. First select the hotplate. Touch the boost symbol. **b** lights up on the display. The function is activated. To deactivate, select the hotplate and touch boost symbol. **b** goes out on the display and the hotplate switches back to the 9 heat setting.

Childproof lock

You can use the childproof lock to prevent children from switching on the hob. The hob must be turned off. Activate by pressing the key symbol for approx. 4 seconds. The indicator next to the key symbol lights up for 10 seconds. The hob is locked. Deactivate by pressing the key symbol for approx. 4 seconds. The lock is now deactivated.

Time-setting options


 
 
 

 

Your hob has two timer functions:

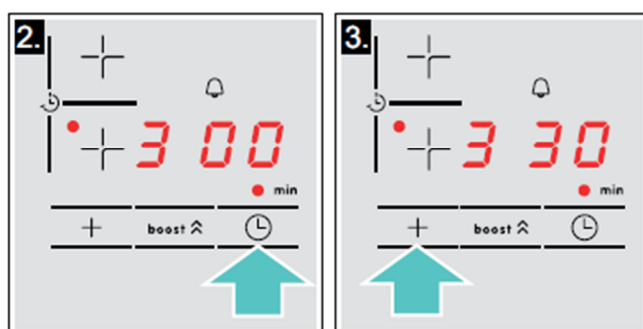 
- Programming the cooking time
- Kitchen timer


 
Programming the cooking time

The hotplate automatically switches off after the time that is set has elapsed.

Setting procedure:

1. Select the hotplate and the required heat setting.
2. Touch the  symbol.  lights up in the display for the hotplate.  appears in the timer display.
3. Touch the  or  symbol. The basic setting appears:
 symbol: 30 minutes.
 symbol: 10 minutes.



 
 


4. Use the  or  symbol to select the required cooking time.

 
 
 
After a few seconds, the time begins to elapse.

Note: The same cooking time can be set automatically for all hotplates. The set time for each of the hotplates counts down independently. You can find information on automatically programming the cooking time in section → "Basic settings"

Changing or deleting the time

Select a hotplate. Touch the  symbol and use the  or  symbols to change the cooking time, or set the time to .

Once the time has elapsed

The hotplate switches off. A beep sounds and in the time program function display  appears for 10 seconds. The  indicator on the hotplate lights up. Pressing the  symbol turns off the indicators and stops the beeping.

Notes

 
 
 
 
 
 
 
 
 
 
 
- If a cooking time was programmed for several hotplates, the time information for the selected hotplate is shown in the timer display.
- You can set a cooking time of up to 99 minutes.

The kitchen timer

 



 

You can use the kitchen timer to set a time of up to 99 minutes.

This functions independently from the hotplates and from other settings. This function does not automatically switch off a hotplate.

 
Setting procedure:

 
1. The kitchen timer can be set in two different ways:
 - If a hotplate has been selected, touch the  symbol twice.
 - If no hotplate is selected, touch the  symbol. The  display beside the  symbol lights up.  appears in the timer display.
2. Touch the  or  symbol. The basic setting appears.
 symbol: 10 minutes.
 symbol: 05 minutes.
3. Use the  or  symbol to set the required time. After a few seconds, the time begins to elapse.

Changing or deleting the time

Touch the symbol  repeatedly until the display  lights up beside the symbol . Change the time or use the symbols  or  to set the time to .

Once the time has elapsed

A warning signal sounds.  is displayed on the time program function display. After 10 seconds the indicators turn off.


 




Pressing the  symbol turns off the indicators and stops the beeping.

OVEN BOSCH


 

Control panel

The **control knobs** can be pushed in and remain pressed down when they are in the "out" position. Press down on the control knob again to release it back up.

Buttons can be used to set various additional functions on your appliance. You will be able to see the values for these **on the display**.

| Symbol | | Meaning |
|---|----------------------|--|
|  | Time-setting options | Tap the symbol repeatedly to select the time  , timer  , duration  and end time  . |
| — | Minus | Reduce setting values. |
| + | Plus | Increase setting values. |
| kg | Weight | Select a weight for the programmes. |
|  | Childproof lock | Lock and unlock the oven functions on the control panel. |

Temperature

| Position | | Meaning |
|---|-------------------|---|
| ● | "Off" position | The appliance is not heating. |
| 50-275 | Temperature range | The temperature that can be set in the cooking compartment in °C. |
| 1, 2, 3 or I, II, III | Grill settings | The configurable settings for the grill, large area  and small area  (depending on the appliance model). Setting 1 = low Setting 2 = medium Setting 3 = high |
|  | Programmes | The setting for the programme function. |








Use

1. Use the function selector to switch the appliance on.
2. Adjust the temperature or grilling power with the temperature selector.
3. When you finish cooking, turn off the applicane by turning the function selector to the 0-position.

Childproof lock




You can use the childproof lock to prevent children from swtiching on the oven. To activate the childproof lock, the function selector must be set to the "Off" position. Press and hold the key button for approx. 4 seconds. The symbol for this function will appear on the display. The childproof lock is now activated. To deactivate the childproof lock, press and hold the key butto again for approx. 4 seconds until the symbol goes out on the display.

Types of heating and functions

| Type of heating | Use |
|---|--|
|  3D hot air | For baking and roasting on one or more levels. The fan distributes the heat from the ring heating element in the back panel evenly around the cooking compartment. |
|  Gentle hot air | For gently cooking selected types of food on one level without preheating. The fan distributes the heat from the ring-shaped heating element in the back panel around the cooking compartment. This heating function is used to measure both the energy consumption in air recirculation mode and the energy efficiency class. |
|  Pizza setting | For cooking pizza and dishes that require a lot of heat from underneath. The bottom heating element and the ring heating element in the back panel heat up. |
|  Bottom heating | For cooking in a bain marie and for baking food for extra time. Heat is emitted from below. |
|  Grill, large area | For grilling flat items, such as steaks or sausages, for making toast, and for browning food. The whole area below the grill element becomes hot. |
|  Circulated air grilling | For roasting poultry, whole fish and larger pieces of meat. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food. |
|  Top/bottom heating | For traditional baking and roasting on one level. Especially suitable for cakes with moist toppings. Heat is emitted evenly from above and below. This heating function is used to measure the energy consumption in the conventional mode. |

Other functions

Your new oven has yet more functions; see below for a brief description of these.





| Function | Use |
|---|--|
|  Rapid heating | Preheats the cooking compartment rapidly without accessories. |
|  Interior lighting | Switches on the interior lighting; all other functions remain off. Makes it easier to clean the cooking compartment, for example. |
|  Programmes | For many dishes, the appliance has preprogrammed setting values that you can use. → "Programmes" on page 42 |


Rapid heating


With rapid heating, you can shorten the heat-up time. The, for best results, use 3D hot air or Top/bottom heating. Only use rapid heating when a temperature of over 100 celsius degrees has been selected. Set the function selector to rapid heating function. Use the temperature selector to set the temperature. The oven will start heating after a few seconds. Once rapid heating is complete, an audible signal will sound. Switch to one of the above functions and put the food in the oven.

Time-setting options

Your appliance has different time-setting options.

| Time-setting option | Use |
|--|---|
|  Cooking time | Once the set cooking time has elapsed, the appliance will automatically stop heating. |
|  End time | Enter a cooking time and the required end time. The appliance will start up automatically so that it finishes cooking at the required time. |
|  Timer | The timer functions like an egg timer. It runs independently of the appliance when it is heating and of other time-setting options and does not affect the appliance. |
|  Time | When no other function is running in the foreground, the appliance will show you the time of day on the display. |

Before you can call up the cooking time using the  button, you will need to set a heating function. Once you have set a cooking time, the end time can be called up. The timer can be set at any time.

 
 
An audible signal will sound once the cooking time or timer duration has elapsed. You can cancel the audible signal early by touching the  button.

Note: You can change how long the audible signal sounds for in the basic settings. → "Basic settings" on page 23

 
 
Setting the cooking time

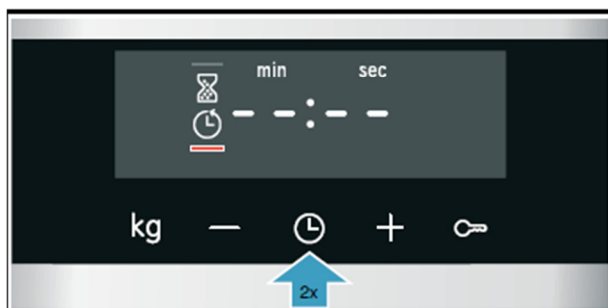 
You can set the cooking time for your food on the appliance. This prevents the food from accidentally being cooked for too long, and means that you do not have to stop what you are doing to switch off the oven.


 
The maximum time that can be set is 23 hours and 59 minutes. The cooking time can be set in 1-minute increments up to one hour, and then in 5-minute increments.

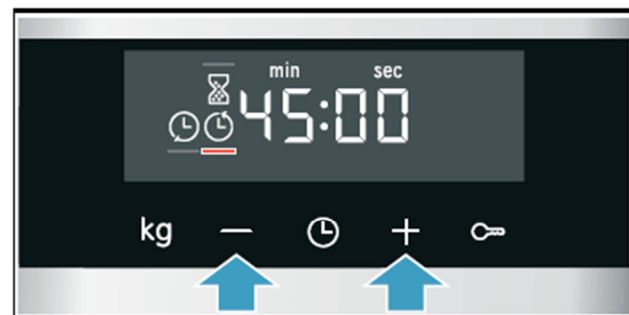 
The cooking time will start at a different default value depending on which button you touch first: 10 minutes if you touch the  button and 30 minutes if you touch the  button.

Example in the picture: Cooking time of 45 minutes.


1. Set the type of heating and temperature or setting.
2. Touch the  button twice.
The cooking time  will be highlighted on the display.



3. Use the  or  button to set the cooking time.

 


The appliance will start heating after a few seconds. The remaining time will count down on the display.

On some appliances, the time counts down in the background. You can use the  button to check how much time is left.

 
 
The cooking time has elapsed

 
An audible signal will sound. The appliance will stop heating. The cooking time will be zero on the display.

Once the signal stops, you can touch the  button to set a new cooking time.

Once your food is cooked, turn the function selector to the "Off" position to switch the appliance off.

 
Changing and cancelling

You can use the  or  button to change the cooking time at any time. After a few seconds, the change will be applied.

To cancel, use the  button to reset the cooking time all the way to zero. The appliance will continue heating without a cooking time.

Checking time-setting options

If time-setting options have been set, the corresponding symbols are lit up on the display. The symbol for which the time is currently being displayed will be indicated.

To check the values for the different time-setting options, touch the  button repeatedly until the required symbol is indicated.

Setting the end time

You can delay the time at which cooking is due to finish. You can, for example, put your food in the cooking compartment in the morning and set the cooking time so that it is ready at lunch time.

Notes

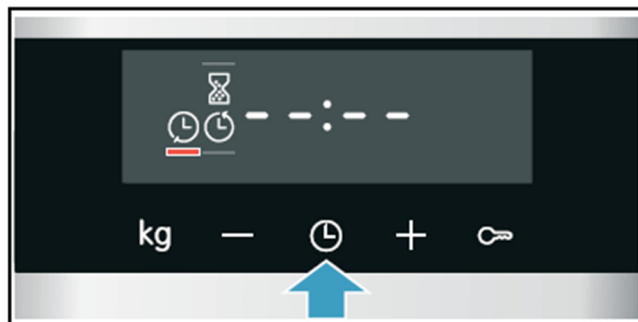 
- Make sure that food is not left in the cooking compartment for too long as it may spoil.
- Do not adjust the end time once the appliance is already in operation. Otherwise the cooking result may no longer be satisfactory.
- The end time cannot be set for types of heating with grill function.

The end of the cooking time can be delayed by up to 23 hours and 59 minutes.

Example in the picture: The time is 10.30 a.m., a cooking time of 45 minutes has been set and you want the food to be ready at 12.30 p.m.

1. Set the type of heating and temperature or setting.
2. Touch the ⌚ button twice and use the $-$ or $+$ button to set the cooking time.
3. Touch the ⌚ button again.

The end time ⌚ will be highlighted on the display.



4. Use the $+$ or $-$ button to delay the end time.



The appliance will apply the settings after a few seconds. The end time will be shown on the display. Once the appliance starts, the time will begin counting down.

On some appliances, the time counts down in the background. You can use the ⌚ button to check how much time is left.

The cooking time has elapsed

An audible signal will sound. The appliance will stop heating. The cooking time will be zero on the display.

Once the signal stops, you can touch the $+$ button to set a new cooking time.

Once your food is cooked, turn the function selector to the "Off" position to switch the appliance off.

Changing and cancelling

You can use the $-$ or $+$ button to change the end time. After a few seconds, the change will be applied. The end time cannot be changed once the cooking time has already started to count down. Otherwise the cooking result would no longer be satisfactory.

To cancel, use the $-$ button to set the end time all the way back to the current time plus the cooking time. The appliance will start to heat and the cooking time will start to count down.

Checking time-setting options

If time-setting options have been set, the corresponding symbols are lit up on the display. The symbol for which the time is currently being displayed will be indicated.

To check the values for the different time-setting options, touch the ⌚ button repeatedly until the required symbol is indicated.

Setting the timer

The timer runs alongside other settings. You can set it at any time, even if the appliance has been switched off. It has its own audible signal so that you can tell whether it is the timer or a cooking time that has elapsed.

The maximum time that can be set is 23 hours and 59 minutes. Up to 10 minutes, the timer duration can be set in 30-second increments. Above 10 minutes, the time increments become longer the higher the value.

The timer duration will start at a different default value, depending on which button you touch first:

5 minutes if you touch the $-$ button and 10 minutes if you touch the $+$ button.

1. Touch the ⌚ button until the timer symbol ⌚ is underlined.

2. Use the $-$ or $+$ button to set the timer duration. After a few seconds, the timer duration will start to count down.

Tip: If the set timer duration is the duration for which you wish to cook your food, use the cooking time. The appliance will then switch off automatically when it has finished cooking.

The timer duration has elapsed

An audible signal will sound. The timer duration will be zero on the display.

Touch any button to switch off the timer.

Changing and cancelling

You can use the $-$ or $+$ button to change the timer

duration at any time. After a few seconds, the change will be applied.

To cancel, use the $-$ button to reset the timer duration all the way to zero. The timer is now switched off.

Checking time-setting options

If time-setting options have been set, the corresponding symbols are lit up on the display. The symbol for which the time is currently being displayed will be indicated.

To check the values for the different time-setting options, touch the ⌚ button repeatedly until the required symbol is indicated.