

HOB CANDY TRIO



The zones

Highlight

It is operational within 3 seconds and is suitable for steady, homogeneous and sustained cooking.

Halolight

It is suitable for frying meat, rapid boiling and intensive cooking where a high temperature is required for a very short time.

Use

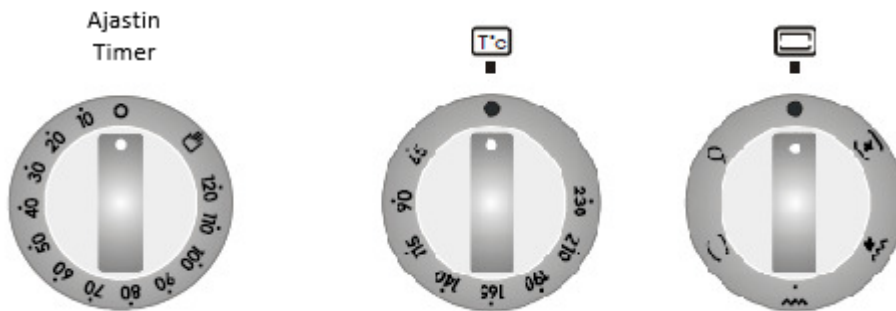
1. Choose the cooking zone.
2. The power-on indicator light comes on to show that the heat zone is operating.
3. Each zone is linked to a residual heat indicator located on the hob. It lights up when the heat zone temperature reaches 60°C and above. It will stay on, even if the unit is switched off, until the surface has cooled down.
4. To switch off a heat zone, turn the corresponding control knob until the position "0".





Recommendations

- Do not use the surface as a cutting board or as a working surface.
- Do not slide cookware across the hob.
- Aluminum foil and plastic pans must not be placed on heating zones.

OVEN CANDY TRIO

NOTICE! The oven and the dishwasher cannot be used simultaneously!



-  Tavallinen kypsennys / Conventional cooking (65°C - 230°C)
-  Grillaus / Grill (230°C)
-  Kiertoilmagrillaus / Fan assisted grill (190°C - 210°C)
-  Kiertoilmakypsennys / Fan cooking (65°C - 210°C)

Use

1. Turn the control knob on the requesting cooking method and set a temperature.
2. Turn the timer knob in order to turn the oven on (1 – 120 min). When the time is up, the timer automatically cuts off the power supply to the oven. The oven can also be turned off manually by turning the timer knob back to the 0-position.