


## DISHWASHER ELECTROLUX

Open the water connection from the kitchen tap (on/off switcher). Close the connection after program has finished.



### Control panel

- 1 – Power button
- 2 – Display
- 3 – Delay start button
- 4 – Program button (up)
- 5 – Program button (down)
- 6 – Energy saving button
- 7 – Multitab function button
- 8 – Reset button
- 9 – Indicator lights

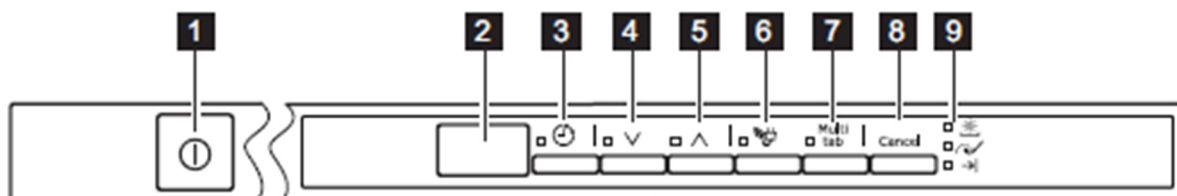

## Use

1. Open the water connection.
2. Press the power button.
3. Select the program by pressing the program button repeatedly until the number of the desired program number is displayed.
4. If necessary, select the desired additional function.
5. Close the machine door. The program starts automatically.

When the program is finished, the “End of program” indicator lights up. Press the power button to turn off the device. **Close the water connection.**

### Washing programs

### Duration (minutes)

1 – AUTO: All dining and cooking dishes	80-125
2 – Very dirty dishes, pots and pans	105-115
3 – Quick wash for dishes to be washed after meal	30
4 – ECO: Normal soiled dishes	160-170
5 – Slightly soiled dishes	45-55
6 – Normal soiled dishes	65-75
7 – Pre-wash	12

### Additional functions

#### Multitab

Only enable this additional function when using combination detergent tablets.

#### Energy save

Enable or disable the energy save function before starting the program. This function lowers the drying temperature. Energy consumption is reduced by 25 %.