


DISHWASHER GRAM

Open the water connection from the kitchen tap (on/off switcher). Close the connection after program has finished. →

Control panel

1. On/Off button
2. Program selection button
3. Delay button
4. Washing cycle progress indicators
 - a. Washing cycle symbol
 - b. Rinse cycle symbol
 - c. Drying cycle symbol
 - d. End cycle symbol
5. Selectet button
6. Options button
7. Start/Pause button
8. Rinse aid indicator
9. Salt indicator
10. Tablet indicator
11. Hald load indicator
12. Extra hygiene indicator
13. Extra rinse indicator
14. Exrra drying indicator
15. Remaining time indicator

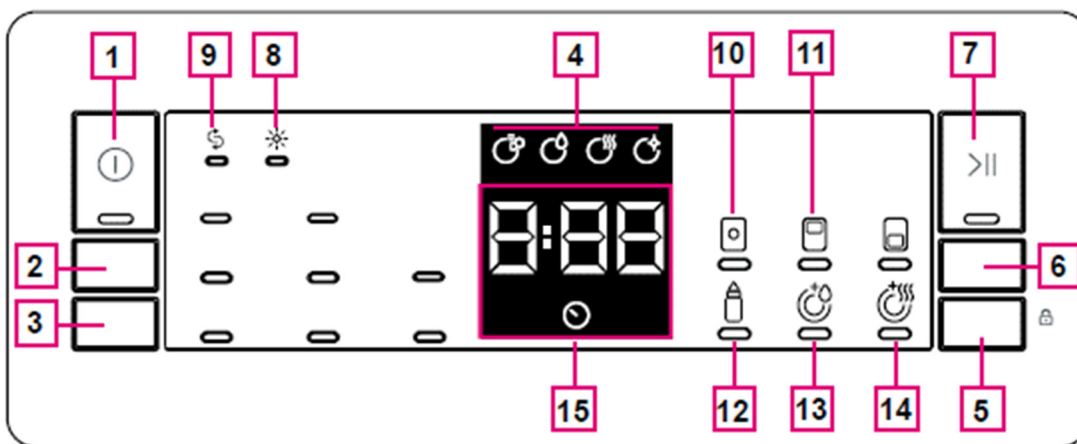

Use

1. Open the water connection.
2. Press the On/Off button.
3. Select the desired progrman by touching the icons located on the left side of the display.
4. (If desired, select additional functions for extra hygiene, rinsing or drying.)
5. (If desired, set the program to start 1-24 hours with the Delay button.
6. Press Start/Pause button to start the program.

When the program is finished, turn off the machine at the On/Off button and open the machine door. **Close the water connection.**

Programme table

Programme	Duration (min)	Description
Prewash	15	To rinse dishes that you plan to wash later.
Quick 30'	30	For lightly soiled dishes and a quick wash.
Eco (Reference)	198	Standard programme for dishes which are used daily but are not heavily soiled.
Middle	94	For dishes which are used daily but are not heavily soiled.
Quick & Clean	50	A faster programme for dishes which are used daily but are not heavily soiled.
Auto Delicate	66-100	Automatic programme for delicate dishes which are not heavily soiled.
Auto Middle	88-104	Automatic programme for dishes which are not heavily soiled.
Auto Intensive	106-152	Automatic programme for heavily soiled dishes.

Child lock

Child lock is activated/deactivated by pressing select button (5) for about 3 seconds. When it is activated, all leds blink and "CL" is shown on Remainin time indicator (15) once. When it is deactivated, all lamps and "CL" blink twice.