



## *Instructions for use of the room temperature and ventilation controller*



Room temperature at the moment

Humidity of the room and outside temperature.

Temperature unit replacement Celsius/Fahrenheit.

1.) Setting the room temperature

2.) Ventilation Power Control

3.) Language selection

### **1.)room temperature setting:**

This allows you to adjust the temperature you want in your room. Note! Floor heating reacts slowly to change. The default setting is 21.5 degrees.

### **2.) Ventilation power control:**

Here you can control the power of the apartment for the Min/med/max power. With the Auto setting, the ventilation operates with a co-pilot. The power of ventilation instrument changes with a small delay. You can also change power using the buttons on the cooker hood. When cooking open cooker hood slowly to power up the cooker hood ventilation. The last change will remain effective. In some situations (e.g. frost limit), not all power is available. The Ventilation control works only with the living room regulator, not the bedrooms.

### **3.) Language selection:**

Here you can change the user interface language. Available in Finnish, English and Russian.