

DRYING CABINET

NOTICE! Drying cabinet is not working while sauna stove is on.

Hang the longer pieces of clothing on the sides and shorter on the middle racks. The centre of the cabinet needs to be left clear for the air to flow efficiently and thereby ensure that the clothes dry quickly and evenly.

There are two controls to adjust on the top panel:

- Normal drying: set temperature midway and timer 3-4 hours
- Maximum time is four hours. Time needed for drying depends on the amount of the laundry and thickness of the fabrics.
- Notice! The materials of shoes or other non-washable items may be damaged or create dangerous vapors with intense heat.
- Overheating protector may switch on if using maximum temperature. If the drying cabinet shuts down, turn both controls to 0 position and wait 30 minutes.

