

## Cooker hood

### Using the sliding cooker hood

Opening the cooker hood controls the light and the booster. When you open the sliding hood only a little, the light turns on. Open more and the booster starts to work. Sliding the cooker hood back turns off the light and closes the booster.

Notice! If the cooker hood has not been slid back, the booster shuts down in 60 minutes. Booster must be on during the cooking.

### Control panel



INFO light: There's only light when the cooker hood needs to be maintained.

Speed lights: 1-4 lights on. Most effective setting is 4 lights on.

Booster: light is on when booster is working.

Notice! Flaming food is strictly forbidden.