

## Cooker hood



**1**

**2**

**3**

1. Light on/off
2. Speed control: I= minimum, IV= maximum
3. Booster for cooker hood. When in maximum position booster is on 60 minutes. Shut down the booster by turning the control back to starting point.  
Turning this control sets the booster automatically to speed III. If you need more suction, turn speed control to position IV.

**Notice! Flaming food is strictly forbidden.**