

TAP FOR THE DISHWASHER

Before using the dishwasher, please make sure the tap for the dishwasher has been set as open. After programme is finished, please close the tap.

