


## HOB AND OVEN ROSENLEW

### Function panel

1. Cooking area selectors
2. Oven temperature selector
3. Oven function selector
- 4a. Oven indicator light
- 4b. Hob indicator light

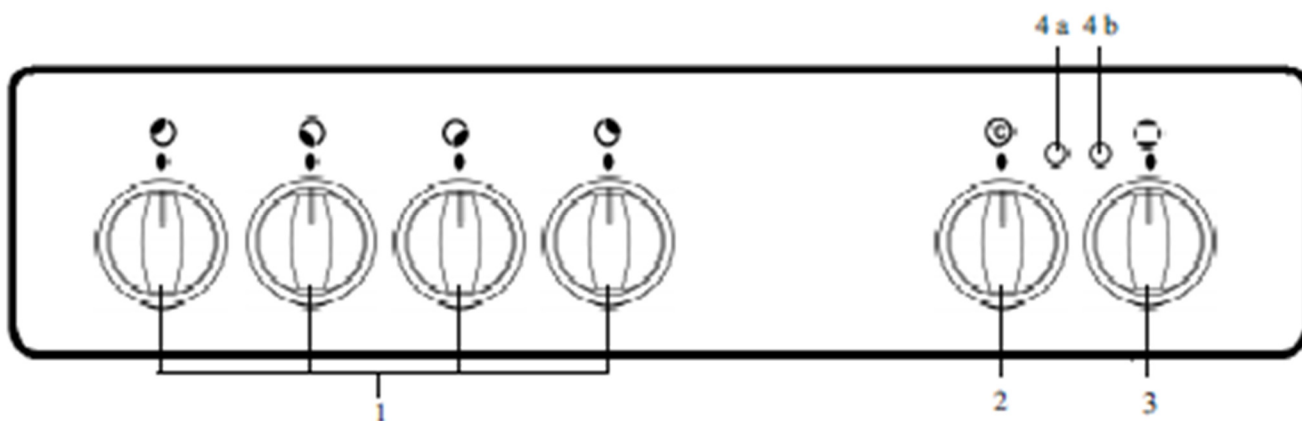


### Using the hob








The power of the cooking zones is controlled by the knobs marked 0 - 12. Turn the knob of the desired cooking zone to the desired power. Reset the knob after use.
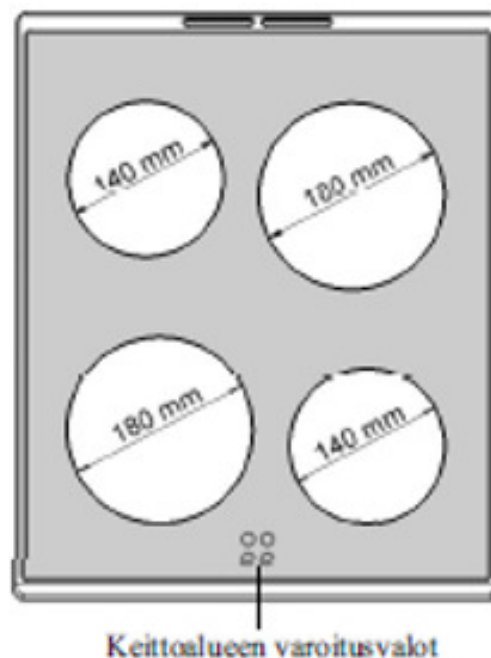
### Safety instructions

- Each cooking zone has its own warning light. The light turns on if the temperature exceeds 55 degrees Celsius, regardless of whether the cooking zone is switched on or not.
- Do not store anything on the stove.
- Keep children away from the stove.

**Oven functions** In all functions, the indicator light comes on during the heating phase and goes out when the desired temperature is reached.



-  **Lightning** of the oven turns on when you are selecting functions. You can also turn only the light on without using any other function.
-  **Top/bottom heat**
-  **Top heat**
-  **Bottom heat**
-  **Grill**
-  **Quick heating** Grill and bottom heat. Oven will heat to 200 Celsius degrees in 7 minutes.
-  **Stewing** Up to 125 Celsius degrees.

### Using the oven

1. To select the oven function, turn the oven function selector clockwise to the desired function and turn the oven temperature selector to the desired temperature.
2. Oven indicator light goes out when the temperature reaches the set value.
3. After cooking, set both controls to 0-position.

### Safety instructions

- Do not open the oven door unnecessarily during cooking.
- Do not place anything on the oven door when it's open.