



MICROWAVE OVEN

Cookware material	Microwave	Barbecue grill	Combi Mode
Heat-resistant glass	YES	YES	YES
Regular glass	NO	NO	NO
Heat-resistant ceramics	YES	NO	NO
Microwave-safe plastic utensils	YES	NO	NO
Kitchen paper	YES	NO	NO
Metal container	NO	YES	NO
Metal rack (provided for the oven)*	NO	YES	NO
Aluminium foil and foil containers	NO	YES	NO

- 1) Control panel
- 2) Grill element
- 3) Light
- 4) Level
- 5) Doorglass
- 6) Protection element (Your device turns off when door will be opened)
- 7) Turnable shaft
- 8) Square grill rack*
- 9) Enamel tray
- 10) Glass plate

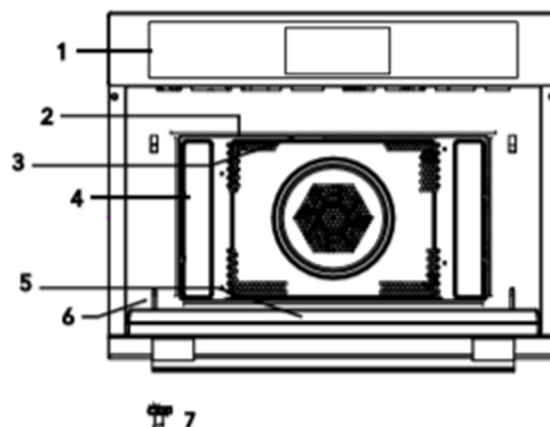

OPERATION

EN

Clock setting

After connecting the oven to the power supply, a flashing "00:00" will appear and you will hear a single beep.

- 1) Press **+** or **-** button to set the correct time (between 00:00 and 23:59.)
- 2) After setting the correct time, press **⌚**. The clock has been set.

Note:

- 1) To change the time, press and hold **⌚** button for 3 seconds. The current time disappears and the display shows a flashing time digits.

To set new time press **+** or **-** and press **⌚** to confirm the setting.

- 2) When setting the clock, press and hold **+** or **-** to change time by 10 min., each short press changes time by 1 minute.

Microwave Cooking

- 1) To start microwave cooking press **⏻** button. The display shows a flashing "01:00" and the microwave icon appears. If no button is pressed for 10 seconds, the current power level is confirmed automatically.

- 2) To set the microwave power (from 100W to 900W) press **⏻**, and then **+** or **-** to set the power level.

- 3) To set the cooking time press **⌚**, then set the time using **+** or **-** button.

The maximum cooking time depends on the power level. If power is set to 900W, the maximum time is 30 minutes, for other power levels, it is 90 minutes.

- 4) Press **⏻** to start cooking.

Microwave power table:








Microwave Cooking Power	100%	80%	50%	30%	10%
Display	900W	700W	450W	300W	100W

The table below presents the power level to be selected and dishes that may be prepared at this power level.








Power	Dish
900 W	- Boiling of water, keeping food warm - Cooking of chicken, fish, vegetables
700 W	- Keep warm - Cooking of mushrooms, seafood - Cooking egg and cheese dishes
450 W	- Cooking of rice, soup
300 W	- Defrosting - Melting chocolate and butter
100 W	- Defrosting delicate/fragile dishes - Defrosting food with irregular shapes - Ice softening - Dough proving

Function		Operation mode		
	Microwave		Microwave	Microwave Microwave function for cooking and heating vegetables, potatoes, rice, fish and meat.
	Warming up		Forced air circulation	Blowing hot air With hot air you can prepare meals in the same way as in a conventional oven. Microwave function is not active. It is recommended to preheat the oven before putting the dish into the oven.
			Roaster with fan	Grill with fan This function is used for even cooking of dishes and simultaneous browning of the skin.
			Lower heater with forced air circulation	Lower heater + forced air circulation is useful for baking dishes such as pizza, moist cake, fruit cake, sponge cake
			Grill	Grill The grill is particularly useful for cooking thin cuts of meat and fish.
	Combi function		Forced air circulation	Microwave + hot air For quick baking of dishes.
			Roaster with fan	Microwave + grill with fan is useful for the preparation of small cuts of meat, fish or vegetables, and even browning of skin.
			Lower heater with forced air circulation	Microwave + lower heater + forced air circulation is useful for dishes that require rapid cooking and heating of the dish
			Grill	Microwave + Grill This function is used for rapid cooking and simultaneous browning of the dish skin (also baked dishes). Microwave and grill on at the same time. Microwaves cook the food and grill bakes it.
	Automatic programs		P01 - P13	Programs for automatic cooking (13 predefined programs) can be used for cooking many types of meat. Select the type of food and its weight.
			d01 - d03	Defrosting by weight (3 predefined programs). Specify the weight of the food to be defrosted








Grill function

- 1) Press  to activate the heating function,  symbol will light up on the display.
- 2) Press , **+** or **-** to select the grill function. Default grill power is set to level 3. After selecting the grill function, the display shows  symbol.
- 3) Press  to set the desired grill power level.
- 4) Press **+** or **-** to adjust the grill power level from 1 to 3.
- 5) Press  to set the time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 to 90 minutes.
- 6) Press  to start the cooking process.








Cooking with forced air circulation function

- 1) Press  to activate forced air circulation function,  symbol will light up on the display.
- 2) Press , **+** or **-** to select the forced air circulation function. Default cooking temperature is 180°C. After selecting the forced air circulation function, the display shows  symbol.
- 3) Press  to set the desired temperature.
- 4) Press **+** or **-** to set the temperature from 50°C to 230°C.
- 5) Press  to set the cooking time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 minutes to 5 hours.
- 6) Press  to start the cooking process.










Cooking with the grill function with fan

- 1) Press  to activate the heating function,  symbol will light up on the display.
- 2) Press , **+** or **-** to select the grill with fan function. Default cooking temperature is 180°C. After selecting the grill with fan function, the display shows  symbol.
- 3) Press  to set the desired temperature.
- 4) Press **+** or **-** to set the temperature from 100°C to 230°C.
- 5) Press  to set the cooking time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 minutes to 5 hours.
- 6) Press  to start the cooking process.










Cooking with the lower heater with forced air circulation function

- 1) Press  to activate the heating function,  symbol will light up on the display.
- 2) Press , **+** or **-** to select the lower heater with forced air circulation function. Default cooking temperature is 180°C. After selecting the lower heater with forced air circulation function, the display shows  symbol.
- 3) Press  to set the desired temperature.
- 4) Press **+** or **-** to set the temperature from 100°C to 230°C.
- 5) Press  to set the cooking time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 minutes to 5 hours.
- 6) Press  to start the cooking process.










Cooking with combi function (microwave and grill)

- 1) Press  to activate combi function (microwave + grill),  and  symbols will light up on the display.
- 2) Press , **+** or **-** to select combi function (microwave + grill). Default grill power is set to level 3. After selecting the grill function, the display shows  symbol.
- 3) Press  to set the desired grill power level.
- 4) Press **+** or **-** to adjust the grill power level from 1 to 3.
- 5) To set the microwave power (from 100W to 700W) press , and then **+** or **-** to set the power level. The default power level is 300W.
- 6) Press  to set the cooking time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 to 90 minutes.
- 7) Press  to start the cooking process.










Cooking with combi function (microwave + forced air circulation)

- 1) Press  to activate combi function (microwave + forced air circulation),  and  symbols will light up on the display.
- 2) Press , **+** or **-** to select combi function (microwave + forced air circulation). Default grill power is set to level 3. After selecting the grill function, the display shows  symbol.
- 3) To set the temperature (from 50°C to 230°C), press , then **+** or **-** to set the temperature.
- 4) To set the microwave power (from 100W to 700W) press , and then **+** or **-** to set the power level. The default power level is 300W.
- 5) Press  to set the cooking time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 to 90 minutes.
- 6) Press  to start the cooking process.




Cooking with combi function (microwave + grill with fan)

- 1) Press  to activate heating function,  and  symbols will light up on the display.
- 2) Press , **+** or **-** to select the grill with fan function. Default cooking temperature is 180°C. After selecting the grill with fan function, the display shows  symbol.
- 3) Press  to set the desired temperature.
- 4) Press **+** or **-** to set the temperature from 100°C to 230°C.
- 5) To set the microwave power (from 100W to 700W) press , and then **+** or **-** to set the power level. The default power level is 300W.
- 6) Press  to set the cooking time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 to 90 minutes.
- 7) Press  to start the cooking process.




Cooking with combi function (microwave + lower heater + forced air circulation)

- 1) Press  to activate combi function (microwave + lower heater + forced air circulation),  and  symbols will light up on the display.
- 2) Press , **+** or **-** to select combi function (microwave + lower heater + forced air circulation). Default cooking temperature is 180°C. After selecting the air circulation function, the display shows  symbol.
- 3) To set the temperature (from 100°C to 230°C), press , then **+** or **-**.
- 4) To set the microwave power (from 100W to 700W) press , and then **+** or **-** to set the power level. The default power level is 300W.
- 5) Press  to set the cooking time. Default cooking time is 10 minutes. Press **+** or **-** to select the desired time from 10 to 90 minutes.
- 6) Press  to start the cooking process.

Defrosting by weight





- 1) Press  to activate defrosting by weight function.
- 2) Press **+** or **-** to select D01 - meat or D02 - vegetables.
- 3) Press .
- 4) Press **+** or **-** to select weight of the dish 200g - 1000g (D01 - any kind of meat) or 100g - 500g (D02 - any kind of vegetables).
- 5) Press  to start the defrosting process.

Defrosting by time

- 1) Press  to activate defrosting by time function.
- 2) Press **+** or **-** to select D03.
- 3) Press .
- 4) Press **+** or **-** to select the defrosting time (maximum time is 90 min.)
- 5) Press  to start the defrosting process.

Cooking with predefined programs

The appliance has 13 predefined cooking programs. After selecting the program, set the weight of the dish. Power and temperature are set automatically.

- 1) Press  to activate auto function.
- 2) Press , **+** or **-** to select a predefined program P01-P13.
- 3) Press .
- 4) Press **+** or **-** to select the weight of the dish [g]
- 5) Press  to start the cooking process.

Predefined programs table:



Program	Category	Dish
P01**	Vegetables	Fresh vegetables
P02**	Side dishes	Potatoes - peeled/cooked
P03*	Side dishes	Potatoes - baked Turn food after beep. The next stage of combi cooking starts automatically.
P04	Poultry/fish	Portions of chicken/fish Turn food after beep. The next stage of combi cooking starts automatically.
P05*	Baking	Cake
P06*	Baking	Apple pie
P07*	Baking	Quiche
P08**	Warming up	Drink/soup
P09**	Warming up	Dish on a plate
P10**	Warming up	Sauce/stew/dish
P11*	Frozen food	Frozen pizza
P12*	Frozen food	Frozen chips
P13*	Frozen food	Frozen lasagne

- Programs with * symbol have a keep warm step. During this step, the cooking time is stopped and the keep warm symbol appears on the display. An alarm indicated the end of keeping warm time, and the symbol flashes.
- Programs with ** symbol only use the microwave function.

Keep warm function



Keep warm function may be activated after selecting functions: forced air circulation, air circulation, combi (microwave + forced air circulation), combi (microwave + air circulation).



1) Press , the display will show  symbol.

2) Press  to start. When the correct temperature is reached, you will hear three beeps. The keep warm function may be terminated by opening the door or pressing .

Note: Keep warm function only works after selecting the above functions. During keep warm function, microwave function is off.

Child Lock

To set the Child Lock: When the appliance is in a standby mode, press and hold  for 3 seconds - you will hear a long beep indicating that the Child Lock is on, and  symbol will appear on the display.

To deactivate Child Lock: When the Child Lock is on, press and hold  for 3 seconds - you will hear a long beep indicating that the Child Lock is off, and  symbol will disappear from the display.

TROUBLESHOOTING

M
Z

Microwave oven interferes with the TV reception	Television and radio reception may be disrupted when the microwave oven is operating. The same applies to small household appliances such as a blender, vacuum cleaner and electric fan. This is normal.
Dimmed oven lighting.	When cooking with low microwave power, oven light may be dimmer. This is normal.
Condensation forms on the door, hot air comes out through vents.	When cooking, steam can be released from food. Most of the steam escapes through the vents. However some steam can collect in the form of condensation on cooler parts, such as oven door. This is normal.

Fault	Possible cause	How to correct
Oven does not start.	Power cord unplugged or not plugged properly into the socket	Pull the plug and put it back in after 10 seconds.
	Blown fuse or tripped circuit breaker.	Replace the fuse or turn on the circuit breaker (any repairs by manufacturer service only)
	Problem with the power outlet	Check the outlet by plugging in other appliance.
The oven does not heat.	The door is not closed properly.	Close the door fully.
Turntable makes noise when oven operates	Rotating ring or bottom of the oven dirty.	See "Microwave oven maintenance"