
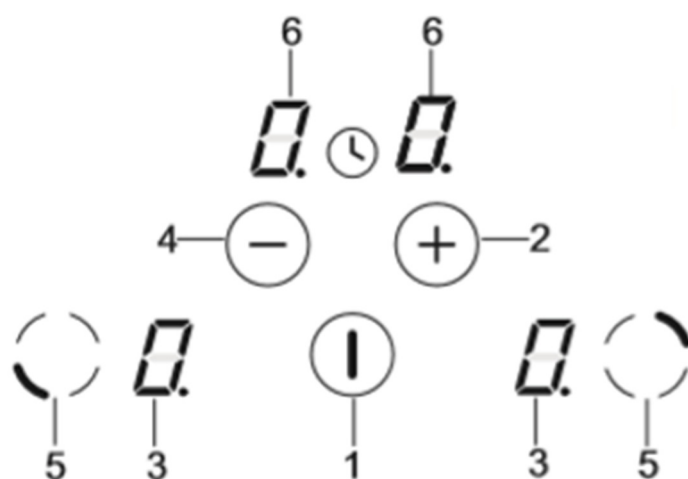


COOKING TOP

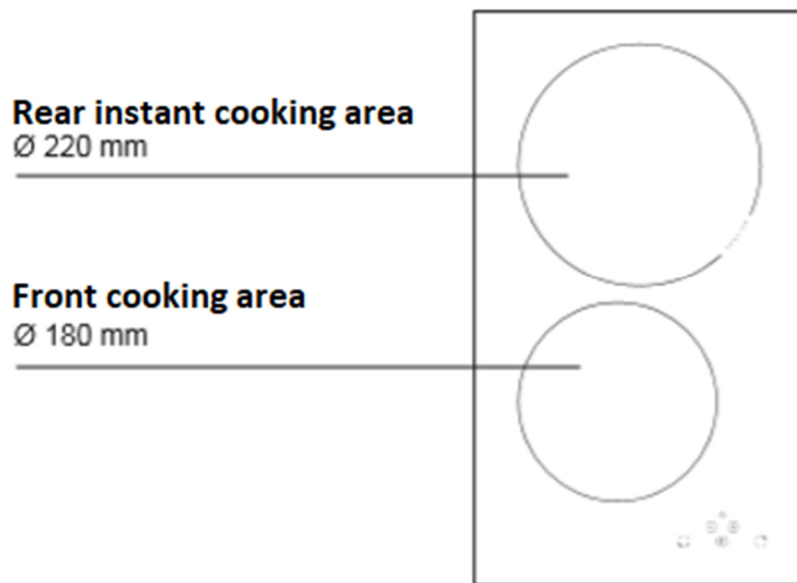

Control panel

1. On/off
2. Sensor button for bigger heat setting
3. Indicator light for cooking area
4. Sensor button for lower heat setting
5. Selection sensor for cooking area
6. Timer display

Important information

Cooking area doesn't go on if there's no kettle or pan on cooking area.

Overheating protector: if hob gets overheated, system reduces cooking area or shuts it down automatically.

Using cook top

1. Push on/off
2. Choose cooking area (5) in 5 seconds -> number 0 turns bright
3. Set wanted heat setting with + or -

Cooking area is activated when there's number or letter on display.

Booster

With booster setting you are able to raise power of rear cooking area from 2300W to 3000W.

1. Choose cooking area (5)
2. Push + and set heat setting 9
3. Push + again
4. "P" is on the display

Booster is on 5 minutes.

If you want to shut down booster, push - and lift kettle or pan from hob.

Timer

1. Choose cooking area (5)
2. Set wanted heat setting with + or -
3. Push + AND - at same time in 10 seconds
4. Push + OR - to set time (01-99 minutes)

If you want to change time, choose cooking area and push + or -.

When time is finished, hob gives the signal for 2 minutes. If you want signal off, push any sensor.

How to stop timer

1. Choose cooking area (5)
2. push + AND -
3. push + to reduce time as 00
4. Now timer is off but cooking area is still on