


OVEN

Control Panel

Model CB8900E

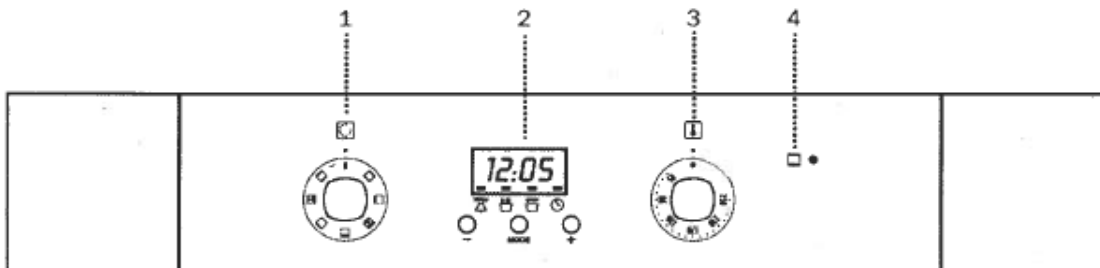

- 1 Function selector.
- 2 Electronic timer.
- 3 Temperature selector.

- 4 Heating indicator light. Indicates that the heat is going to the food and it goes out when the set temperature is reached.

Oven Functions

Switch off oven

Conventional

It is used for sponges and cakes where the heat received must be uniform to achieve a spongy texture.

Conventional with fan

Appropriate for roasts and cakes. The fan spreads the heat uniformly inside the oven.

This cooking mode allows defrosting of food. To do this, set the temperature selector to 0 position.

Grill

For preparing dishes with superficial roasting. It allows the outer layer to be browned without affecting the inside of the food. Ideal for flat food, such as steaks, ribs, fish, toast.

MaxiGrill

Allows greater surfaces to be prepared, than with the grill, together with higher power reducing the time required for browning of the food.

MaxiGrill with fan

Allows uniform roasting at the same time as surface browning. Ideal for grills. Special for large volume pieces, such as poultry game etc. It is recommended to put the item on a rack with a tray beneath to collect the stock and juices.

Caution

While using the Grill, MaxiGrill or MaxiGrill with fan, the door must be kept closed.

Lower element

Heats only from beneath. Suitable for heating dishes and raising pastry and similar.

Grill and Lower element


Special for roasts. It can be used for any piece, whatever its size.

Note

The pilot light remains on in any cooking function.

Use of the Oven

Setting the time on the clock

On connecting the oven, you will notice that 12:00 appears on the clock and that a light begins to flash above the  symbol. Pressing the "+" and "-" buttons the correct time can be set on the clock, which is subsequently stored and the flashing light goes out.

Manual use

After setting the correct time, the oven is ready for use. Select a temperature and a cooking function.

To switch off the oven, set the controls to the position 0.

Functions of the Electronic Clock Programmer

Warning function: This function generates a warning tone at a specified time.


Cooking time: This function allows to programme the oven to cook for a specified time, after which it will switch itself off.

End of cooking time: This function allows to establish the exact hour, after which the oven will switch itself off.


Duration and automatic stop: This function is used to control the duration and the time at which the oven will turn itself off. This function allows the oven to start and stop automatically.

Clock light: The clock light can be switched off when the oven is not in use.


Warning function

- 1 Press the MODE button until the signal above the  symbol begins to flash.
- 2 Choose the time when you want the alarm to sound, pressing the "+" or "-" buttons.
- 3 Subsequently, the light will remain on indicating that the alarm is programmed.
- 4 At the end of the programmed time, an alarm will sound and the light will begin to flash.
- 5 Press any button to turn off the alarm and the screen shows the current time again.

Programming the cooking time


- 1 Press the MODE button until the indicator above the  symbol begins to flash.
- 2 Select the length of time, pressing the "+" or "-" buttons.
- 3 Subsequently, the indicator that was flashing will light, indicating that the oven will switch itself off automatically.
- 4 The clock will then show the current time.
- 5 Select a temperature and cooking function.
- 6 When the set time has elapsed, the oven will disconnect, an alarm will sound and the indicator will begin to flash.
- 7 Press any button to switch off the alarm, reconnecting the oven.
- 8 Set the controls in the position 0 to switch off the oven.





Programming the end of cooking time for the oven

- 1 Press the MODE button until the indicator above the  symbol begins to flash.
- 2 Select the time that cooking is to finish, pressing the "+" or "-" buttons.
- 3 Subsequently, the indicator that was flashing is lit, indicating that the oven will switch itself off automatically.
- 4 The clock will then show the current time.
- 5 Select a temperature and a cooking function.
- 6 When the programmed time is reached, the oven will disconnect, an alarm will sound and the indicator will begin to flash.
- 7 Press any button to switch off the alarm and the oven will reconnect.
- 8 Set the controls to the position 0 to switch off the oven.

This function may be used even though you are already cooking in your oven. To do so, follow the instructions given except N° 5.

Programming the duration and automatic stop

- 1 Press the MODE button until the indicator above the  symbol begins to flash.

- 2 Select the length of cooking time pressing the "+" or "-" buttons.
- 3 Subsequently, the indicator that was flashing will remain lit.
- 4 Press the mode button until the indicator above the  symbol begins to flash.
- 5 Select the time that cooking should finish pressing the "+" or "-" buttons.
- 6 Subsequently, the indicator that was flashing will remain lit.
- 7 Select a function and cooking temperature.
- 8 The oven will remain disconnected with the indicators above the  and  symbols lit. Your oven is programmed.
- 9 When the time to begin cooking is reached, the oven will switch itself on and will continue cooking during the programmed time.
- 10 When the programmed finishing time is reached, the oven will disconnect, an alarm will sound and the light above the  symbol will begin to flash.
- 11 Press any button to switch off the alarm and the oven will reconnect.
- 12 Set the controls to the position 0 to switch of the oven.

Caution

Pressing the MODE button the display on the screen shows any function programmed. It can be changed by pressing the "+" or "-" buttons.


On selecting the desired function, the indicator above the corresponding signal will light.

In the event of a power cut, all the programming of the electronic clock will be erased. The correct time has to be reset and the watch reprogrammed.

Switching off the clock light


To switch off the clock light, press two buttons at the same time and, after several seconds the screen of your clock will go out. To re-light the clock, press any button and the current time will reappear.

This function can only be used when the clock shows the current time and there is no function programmed (No function symbol is lit).

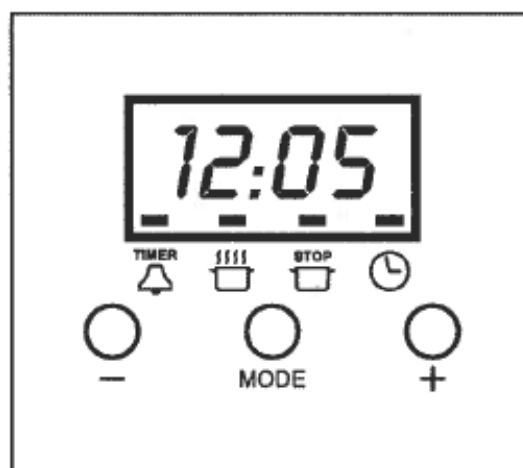

Пользование духовкой

Установка текущего времени на часах

После подключения духовки на дисплее часов высветится «12:00», а над символом  начнет мигать лампочка-индикатор. Нажимая на кнопки «+» и «-», установите текущее время. Значение сохранится, и лампочка перестанет мигать.

Установка работы вручную

После установки текущего времени духовка готова к работе. Установите температуру и режим нагрева. Чтобы выключить духовку, установите ручки всех переключателей в положение «0».

Функции программатора

Оповещение Данная функция обеспечивает оповещение звуковым сигналом по прошествии установленного времени.


Продолжительность приготовления Функция дает возможность запрограммировать продолжительность приготовления, по прошествии установленного времени духовка автоматически выключается.

Окончание приготовления Функция позволяет установить время, после которого духовка автоматически выключается.

Продолжительность и автоматическая остановка Функция позволяет установить продолжительность приготовления и время выключения духовки. Данная функция обеспечивает автоматическое включение и выключение духовки.


Отключение индикации часов Если вы не пользуетесь духовкой, данная функция позволяет отключить индикацию часов.

Функция оповещения


- 1 Нажимайте кнопку MODE, пока над символом  не начнет мигать лампочка-индикатор.
- 2 С помощью кнопок «+» и «-» установите время, когда вы хотите, чтобы прозвучал звуковой сигнал.

- 3 Лампочка-индикатор будет гореть, показывая, что запрограммировано оповещение.
- 4 В установленное время раздастся звуковой сигнал, и лампочка-индикатор начнет мигать.
- 5 Для выключения звукового сигнала нажмите любую кнопку. На дисплее снова высветится текущее время.

Программирование продолжительности приготовления

- 1 Нажимайте кнопку MODE, пока над символом  не начнет мигать лампочка-индикатор.
- 2 С помощью кнопок «+» и «-» установите продолжительность приготовления.
- 3 Мигавшая до этого момента лампочка-индикатор начинает гореть постоянно, показывая, что духовка выключится автоматически.
- 4 На часах высветится текущее время.
- 5 Установите температуру и режим нагрева.
- 6 По прошествии установленного времени духовка автоматически выключится и раздастся звуковой сигнал. Лампочка-индикатор начнет мигать.
- 7 Для выключения звукового сигнала нажмите любую кнопку, тем самым вы снова включите духовку.
- 8 Для выключения духовки установите ручки всех переключателей в положение «0».

Программирование окончания приготовления

- 1 Нажимайте кнопку MODE, пока над символом  не начнет мигать лампочка-индикатор.
- 2 С помощью кнопок «+» и «-» установите желаемое время окончания приготовления.
- 3 Мигавшая до этого момента лампочка-индикатор начинает гореть постоянно, показывая, что духовка выключится автоматически.

Модель СВ

- 1 Ручка переключения работы духовки
- 2 Электронный таймер
- 3 Ручка переключения режима

0 Выключить

Классический

Используется для приготовления блюд, требующих длительного времени, чтобы

Классический

Подходит для приготовления тортов. Вентилятор равномерно распределяет тепло духовки.

Данный режим размораживания. Установите температуру

Гриль

Данный режим приготовления блюд с хрустящей корочкой. Позволяет готовить плоские куски мяса, рыбы, птицы.





Максимальная мощность


Позволяет готовить блюда на большой площади гриля. Увеличивает скорость приготовления.

- 4 На часах высветится текущее время.
- 5 Установите температуру и режим нагрева.
- 6 При наступлении установленного времени духовка автоматически выключится и раздастся звуковой сигнал. Лампочка-индикатор начнет мигать.
- 7 Для выключения звукового сигнала нажмите любую кнопку, тем самым вы снова включите духовку.
- 8 Для выключения духовки установите ручки всех переключателей в положение 0.

Данную функцию можно использовать в процессе приготовления. Следуйте вышеприведенным указаниям за исключением п. 5.

Программирование продолжительности и автоматической остановки

- 1 Нажимайте кнопку MODE, пока над  символом не начнет мигать лампочка-индикатор.
- 2 С помощью кнопок «+» и «-» установите продолжительность приготовления.
- 3 Мигавшая до этого времени лампочка-индикатор начинает гореть постоянно.
- 4 Нажимайте кнопку MODE, пока над символом  не начнет мигать лампочка-индикатор.
- 5 С помощью кнопок «+» и «-» установите желаемое время окончания приготовления.
- 6 Мигавшая до этого времени лампочка-индикатор начинает гореть постоянно.
- 7 Установите режим нагрева и температуру.
- 8 Духовка останется выключенной, а над символами  и  будут гореть лампочки-индикаторы, показывая, что духовка запрограммирована.
- 9 При наступлении времени начала приготовления духовка автоматически включится и будет работать в течение установленной продолжительности приготовления.

10 При наступлении установленного для окончания приготовления времени духовка выключится и раздастся звуковой сигнал. Над символом  начнет мигать лампочка-индикатор.

11 Для выключения духовки установите обе ручки переключателей в положение 0.

Предупреждение!

При нажатии на кнопку MODE на дисплее отобразится установленный режим работы. Чтобы его изменить, воспользуйтесь кнопками «+» и «-».

При выборе функции над ней загорается лампочка-индикатор.

При отключении электроэнергии все установки программатора стираются. В этом случае вам понадобится снова установить текущее время и выбрать необходимую программу.

Отключение индикации часов

Для отключения индикации часов одновременно нажмите и удерживайте две кнопки – через несколько секунд дисплей выключится. Чтобы снова вывести часы для просмотра, нажмите на любую кнопку, дисплей включится и высветится текущее время.

Использование данной функции возможно только, если на часах высвечивается текущее время и не запрограммирована какая-либо другая функция (ни одна из лампочек-индикаторов функций не горит)..

